

LOW FREQUENCY PROGRAM CHART

<u>CHANNEL</u>	<u>FREQUENCY</u>	<u>CHANNEL</u>	<u>FREQUENCY</u>
#1	26.645	#21	26.575
2	26.655	22	26.585
3	26.665	23	26.615
4	26.685	24	26.595
5	26.695	25	26.605
6	26.705	26	26.625
7	26.715	27	26.635
8	26.735	28	26.645
9	26.745	29	26.655
10	26.435	30	26.665
11	26.445	31	26.675
12	26.465	32	26.685
13	26.475	33	26.695
14	26.485	34	26.705
15	26.495	35	26.715
16	26.515	36	26.725
17	26.525	37	26.735
18	26.535	38	26.745
19	26.545	39	27.395
20	26.565	40	27.405

PARTS NEEDED

1. Mimi toggle switch
2. Hook up wire
3. A 3k ohm resister

