

ROBYN SX 401

Adjust L12, L15, L16, L17, and L18 for maximum power.
Adjust VR7 for 100% modulation.
VR3: RF panel meter adjustment.
Connect pin 10 of IC1 to 5.46V and connect
pin 11 of IC1 to 5.46V for adding more frequencies.

ROBYN GT410D

Adjust VR13 and VR12 for maximum modulation.
Connect pin 10 to a switch with the other end
of switch to 5.46V . Connect also pin 11 to
pin 10 for adding more frequencies.

ROBYN SX402D

Adjust L15, L18, L19, L20, and L21 for maximum power.
Adjust VR13 and VR12 for maximum modulation.
Adjust L22 for minimum interference on TV at 54mhz harmonic.
Connect pin 10 of IC1 to 5.46V for new frequencies.

ROYCE 1-621

Adjust L4 for maximum power.
VR3: Adjust for 100% modulation.

REALISTIC TRC424

Adjust L906, L909, and L910 for maximum power.
Adjust VR9 for 100% modulation.
Adjust F901 for minimum interference on TV set at
54mhz harmonic.
Connect pin 6 of IC801 to 5.93V source and connect
pin 5 of IC801 to 5.93V source for more frequencies.

REALISTIC TRC468

Adjust T14 and T15 for maximum power.
Cut D7 for 100% modulation.

ROYCE 604

Tune T302 and L303 for maximum power.
Cut D202 for 100% modulation.