


## HOW TO PUT YOUR YAESU FT707 ON 11 METERS




"WHAT A BEAUTY"

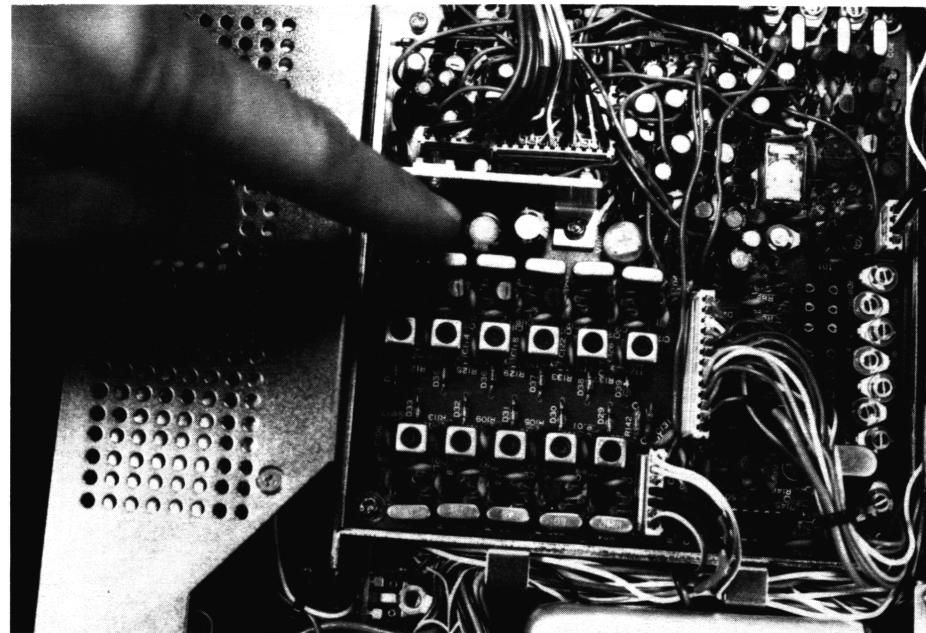

Crystal location AF Board

## FT707 (CONT)

1. Remove X9 and X10 crystals, as shown in picture below.

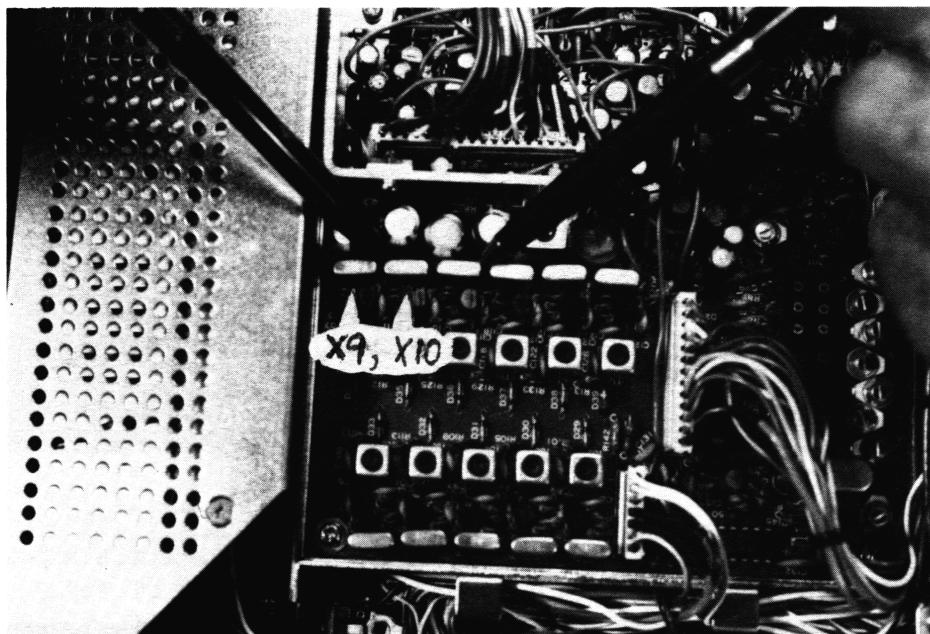

AF board


2. Replace with a 27 and 27.5 crystal, respectively. These are available from YAESU.

### CRYSTAL SPECIFICATIONS

Holder	HC-25/U
Load Capacitance	30pf
Effective Resistance	25 ohm
Drive Level	5mW


## FT707 (CONT)

3. Locate T40, and T41 coil (See picture below). Using an RF Wattmeter, peak T40, and T41, for maximum output.

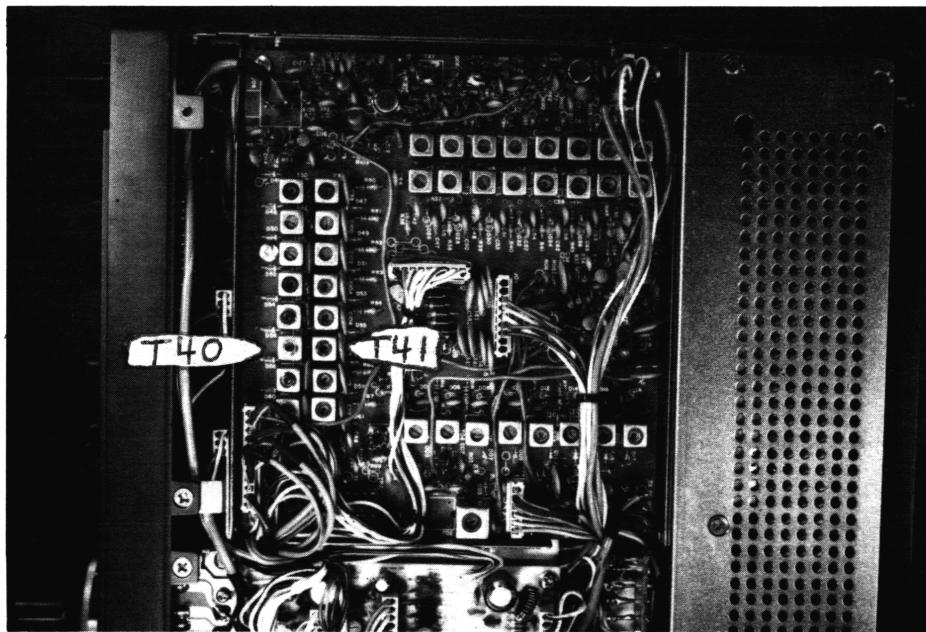


Rf board

4. Adjust T07 on 10A; T08 on 10B. Use RFVM at J06 #2 AF indicator, and peak for maximum reading (See picture below).

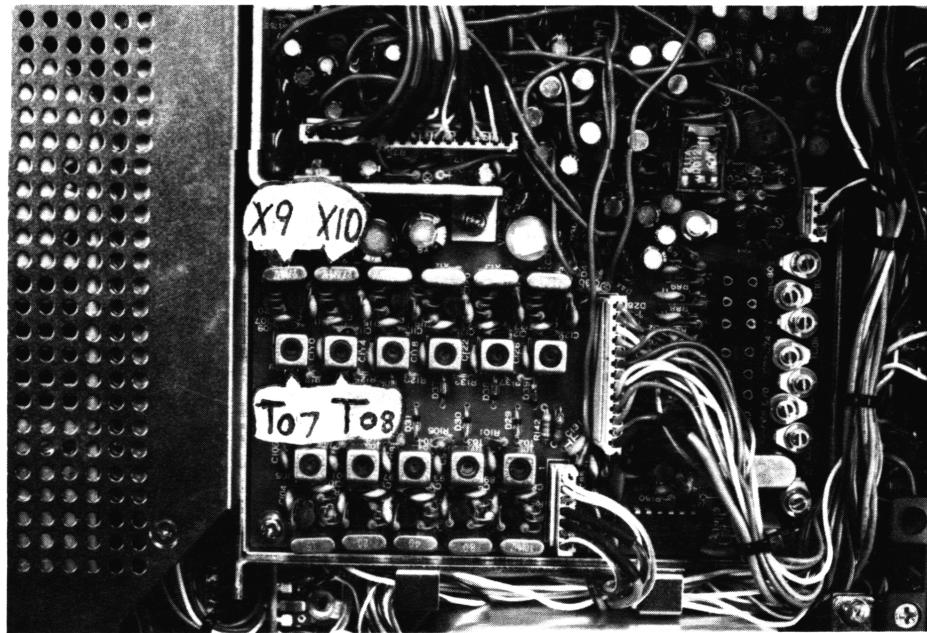

## FT707 (CONT)


5. Adjust T08 for maximum output on RF Wattmeter.

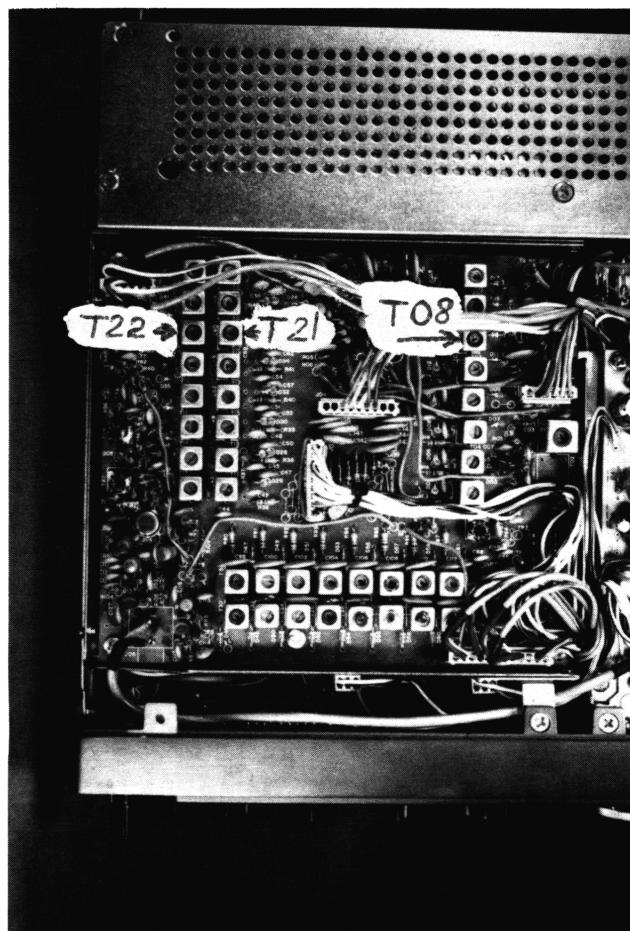

RF board

6. Adjust T21 and T22, for maximum output on RF Wattmeter on 10A and 10B respectively.

## FT707 (CONT)

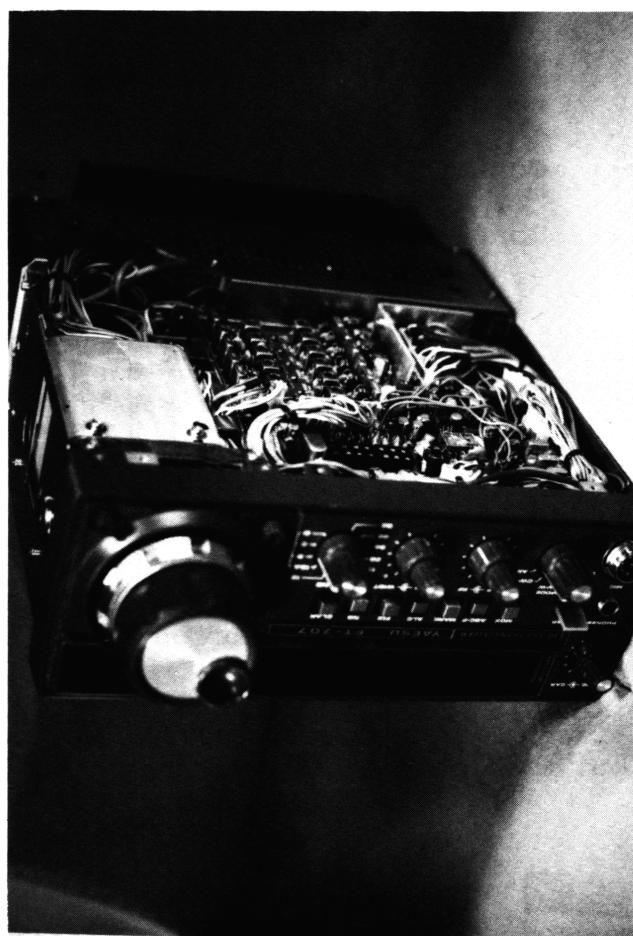

RF board; T08, T21, T22, T40, T41

AF board; X9, X10, T07, T08



Optional Antenna Tuner- A Real Jewel!