## MB8719/11.1125 XTAL CHASSIS

## HOW TO GET BOTH HI AND LO FREQUENCIES W/O XTAL CHANGE


Parts Required:

1-SPDT switch.

2-SPST switches.

12 inches of four conductor ribbon wire.

Wire as shown below:

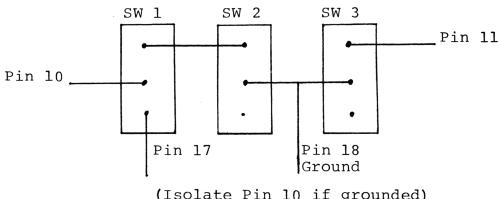

(Isolate Pin 10 if grounded) SW1= 27.605-28.045 SW2= 26.325-26.765 SW3= 26.815-26.955 SW1+SW3= 27.455-27.725

Adjust L19 and L21 for maximum frequency coverage.

Reference: Volume 10, PP 25-31.

If you have trouble getting this mod to work, retune the tripler - VERY CRITICAL - (L18 on President Washington)