



PANASONIC RJ-3700 SM5104G

FREQUENCY EXPANSION:

1. Cut pc trace at pin 9 of IC3 to isolate.
2. Wire up a SPDT Center Off and a SPST Switch as shown below:

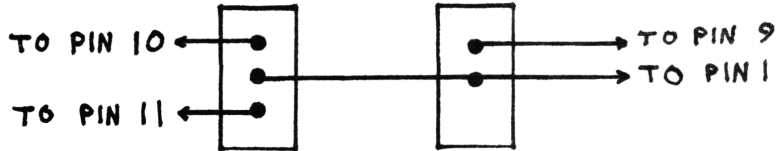

C100 is VCO. Adjust as necessary. Peak T15.
 Frequency chart is in Volume 5 Page 29.

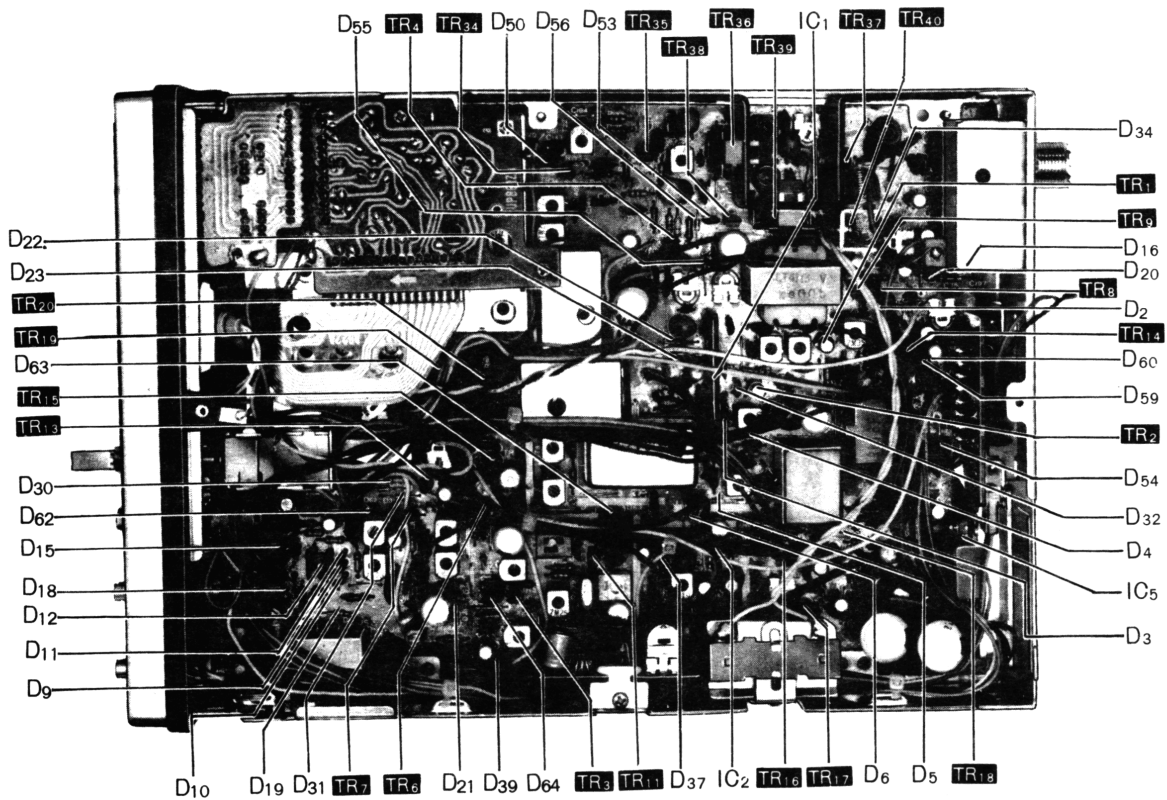


PANASONIC RJ-3700 SM5104G cont'd.

CLARIFIER:

Quick & Easy!

Refer to Drawing:

1. Jumper 1 to 3.
2. Cut trace at 2 or remove wire going to D44-R143.

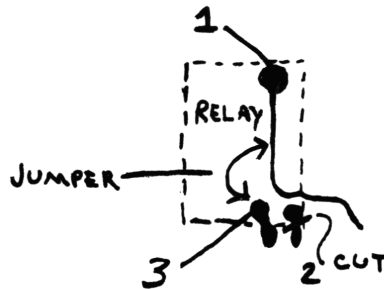

TUNE-UP:

R189 AM Power; R192 ALC; R129 AM Mod

R56 RF Meter; R44 Mod. light

R78-Squelch

R77-S Meter

FREQUENCY-CHANNEL NUMBER CHARTS

Frequency	Channel	Frequency	Channel	Frequency	Channel	Frequency	Channel
26.965 MHz	1	27.085 MHz	11	27.215 MHz	21	27.315 MHz	31
26.975 MHz	2	27.105 MHz	12	27.225 MHz	22	27.325 MHz	32
26.985 MHz	3	27.115 MHz	13	27.255 MHz	23	27.335 MHz	33
27.005 MHz	4	27.125 MHz	14	27.235 MHz	24	27.345 MHz	34
27.015 MHz	5	27.135 MHz	15	27.245 MHz	25	27.355 MHz	35
27.025 MHz	6	27.155 MHz	16	27.265 MHz	26	27.365 MHz	36
27.035 MHz	7	27.165 MHz	17	27.275 MHz	27	27.375 MHz	37
27.055 MHz	8	27.175 MHz	18	27.285 MHz	28	27.385 MHz	38
27.065 MHz	9	27.185 MHz	19	27.295 MHz	29	27.395 MHz	39
27.075 MHz	10	27.205 MHz	20	27.305 MHz	30	27.405 MHz	40