BY STUDYING THE CHART, YOU CAN SEE HOW THE SWITCH SHIFTS THE FREQUENCIES. APPLY THIS SHIFT TO YOUR CONVERSION FREQUENCIES AND YOU CAN SEE HOW EVERY CHANNEL CAN BE PICKED UP WITH THE FLIP OF A SWITCH. TO GET CHANNELS 105-108, APPLY THE SWITCH WHEN MODE 60-104 IS ENABLED. 105-108 WILL BE ON CHANNELS 37-40.

JACKSON EXTENDED LO BAND

M.WASSERMAN

THIS MODIFICATION ADDS ONE MORE BAND OF COVERAGE TO THE JACKSON. IT GIVES 25.615MHz TO 26.055MHz ON BAND "A" WITH EXTEND SWITCH SELECTED. REFER TO VOLUME 27 PAGE 08.(BAND "A" IS THE ONLY BAND AFFECTED BY THE NEW SWITCH.)

PARTS YOU WILL NEED: 3 1N4148 DIODES. 1 SPDT SWITCH.

- 1. FOLLOW THE BROWN WIRE FROM THE BAND SWITCH TO THE P.C. BOARD BEHIND THE CHANNEL SELECTOR.
- 2. UNSOLDER THE BROWN WIRE AT THE PC BOARD AND CONNECT IT TO PIN "B" OF SWITCH 1.
- 3. RUN ANOTHER WIRE FROM WHERE YOU REMOVED THE BROWN WIRE IN STEP 2, TO PIN 'C' OF SWITCH 1.
- 4. CONNECT THE CATHODE OF D1 TO PIN '4" OF IC8.
- 5. CONNECT THE CATHODE OF D2 TO PIN "2" OF IC8.
- 6. CONNECT THE CATHODE OF D3 TO PIN "6" OF IC7.
- 7. SOLDER THE ANODES OF THE THREE DIODES TOGETHER.
- 8. CONNECT THE ANODES TO PIN 'A' OF SWITCH 1.
- 9. REMOVE DIODES D26 AND D27. REPLACE THEM WITH "ONE" (1) "SUPER DIODE".

CONNEX-3300 EXPORT ALIGNMENT

· RAYSRADIO

200 CHANNEL UNIT (25.615-28.305MHz). SAME EXACT CASE AND FRONT FACE PLATE AS THE SUPER STAR 3600 LESS CW AND SSB. IN ITS PLACE IS HI/LO PWR AND ECHO. MODE SELECT SWITCH HAS THREE POSITIONS (PA,FM,AM). ECHO BOARD LOOKS LIKE TYPICAL BBC CIRCUIT. UNIT HAD IDENTICAL PCB AS EXCALIBUR. USED BOARD LAYOUT IN VOLUME 22 PAGE 31.ANOTHER ONE HAD SLIGHT DIFFERENCE IN SYNTHESIZER CRYSTAL ARRANGEMENT. THE FIRST UNIT WITH SER.# 86060341 HAD THREE CRYSTALS IN A GROUP WITH A VARIABLE CAP NEXT TO EACH ONE. THE SECOND UNIT SER.# 012270 HAD THREE CRYSTALS BUT ONLY ONE VARIABLE CAP AND TWO TUNING COILS IN PLACE OF THE VARIABLE CAPS. DRIVER TRANSISTOR IS A 2SC2166 AND FINAL

TRANSISTOR IS A 2SC1969. HIGH POWER WAS 10 WATTS DEADKEY WITH 14 WATTS PEP. LO POWER POSITION WAS 4 WATTS DEADKEY AND 7 WATTS PEP. I SUGGEST REMOVING AMC TRANSISTOR TR32 AND ADJUST VR13 IN HIGH POWER POSITION FOR 5 WATTS DEADKEY AND 20 WATTS PEP. ADJUST VR16 IN LO POWER POSITION FOR 2 WATTS AND 12 WATTS PEP. IF HIGHER CARRIER LEVELS ARE DESIRED, I RECOMMEND REPLACING TR50 WITH TR51 AND REPLACE TR51 WITH ECG37. SOME OF THE VARIABLE RESISTORS ARE USED FOR ADJUSTMENTS OTHER THAN LABELED ON THE PCB. ALL THE VARIABLE RESISTOR ADJUSTMENTS ARE AS FOLLOWS:

VR1 AM/FM SIGNAL METER

VR4 SQUELCH RANGE

VR5 FM DEVIATION

VR8 RF POWER METER

VR12 LO POWER MODULATION

VR13 HIGH POWER CARRIER

VR14 HI POWER MODULATION

VR16 LO POWER CARRIER

SYNTHESIZER ALIGNMENT

CONNEX-3300 SYNTHESIZER ALIGNMENT

			,
TEST EQUIPMENT	TRANSCEIVER	ADJUST	REMARKS
INPUT OF FREQ CNTR TOIC5 PIN3	CH.19		CHECK FOR 10.240MHz
INPUT OF FREQ CNTR	CH.19 AM	UNMARKED VARIABLE CAP	CHECK FOR 10.695MHz
TOIC3 PIN3	XMIT	NEXT TO 10.695MHzXTAL	
INPUT OF DC METER	BAND F	L17	ADJUST FOR 5 VOLTS
TOTP2 (R109)	CH.40		CHECK FOR APROX 1.5V ONBAND A CH.1
INPUT OF O'SCOPE TO	BAND D	L16	ADJUST FOR MAXIMUM RF
TP4 (R107)	CH.19		OUTPUT
INPUT OF O'SCOPE TO	BAND F	L18	ADJUST FOR MAXIMUM RF
TP3 (R74)	CH.40		OUTPUT
INPUT OF FREQ CNTR	BAND C	UNMARKED VARIABLE CAP	ADJUST FOR 16.040MHz
TOTP3 (R74)	CH.19	NEXTTO	EXTERNAL CNTR
		14.010MHz XTAL OR L19	SHOULD READ 26.735MHz
		ONLATER	NEAD 20.7 SOMINZ
		UNITS, SAME	
		MODEL	
INPUT OF FREQ CNTR	BAND F	UNMARKED VARIABLE CAP	ADJUST FOR 17.390MHz
TOTP3 (R74)	CH.19	ORCOIL "A" NEXT	EXTERNAL CNTR SHOULD
	· ·		

TO 15.360MHz

TO 15.360MHz READ 28.085MHz

RECEIVERALIGNMENT

OUTPUT OF SIG GEN	BAND D	L3L4L5L7L8 L10	ADJUST FOR MAXIMUM
FOR 27.185MHz,30%MOD	CH.19 AM	L11 L12	OUTPUT
OUTPUT OF SIG GEN FOR 27.185MHz, NO MOD FM1uV1.5KHz DEV.	BAND D CH.19	L5	ADJUST FOR MAXIMUM AUDIO OUTPUT
1KHZAUDIO TO ANT.			
INPUTJACK			
OUTPUT OF SIG GEN FOR 27.185,30% MOD	BAND D CH.19 AM	VR4	ADJUST SO THAT SQUELCH JUST BREAKS
1KHz 1000uV	SQUELCH MAX		
OUTPUT OF SIG GEN FOR 27.185MHz,30% MOD.,	BAND D CH.19 AM	VR1	ADJUST FOR 9 ON SIGNAL SCALE OF METER
1KHz 100uV	DANDA	14.10	AD HIST FOR A 21/OLTS
OUTPUT OF SIG GEN FOR 26.045MHz, NOMOD. 100uV DCMETER TO TP1 (D2 CATHODE)	BAND A CH.40 AM NB/ANL ON	L1, L2	ADJUST FOR 2-3 VOLTS

TRANSMITTER ALIGNMENT

TEST EQUIPMENT	TRANSCEIVER	ADJUST	REMARKS
INPUT OF WATTMETER TO	BAND F	L40 L42	ADJUST FOR MAX RF OUT
ANTENNA INPUT	CH.40 AM	L43 L44 ღ	ADJL33 FOR BALANCE PWR
*	*	L33	BETWEEN BAND F CH.40
*	*	*	ANDBAND A CH.1
INPUT OF WATTMETER TO	BAND D	VR13	ADJUST FOR 5 WATTS
ANTENNA INPUT	CH.19 AM	*	*
*	RFPWR IN	*	*
*	HIPOSITION	*	*
INPUT OF WATTMETER TO	BAND D	VR16	ADJUST FOR 2 WATTS
ANTENNA INPUT	CH.19 AM	*	*
*	RFPWR IN	*	*
*	LOPOSITION	*	*
INPUT OF SCOPE OR	BAND D	VR14	ADJUST FOR 100%
MODULATION METER TO	CH.19 AM	*	MODULATION
TOANTENNA INPUT	RFPWR	*	*
INSERT 1KHz 30mV TO	in "Hi"	*	*
MIC INPUT	MIC GAIN	*	* .
*	TOMAX	*	*
INPUT OF O'SCOPE OR	BAND D	VR12	ADJUST FOR 100%
MODULATION METER TO	CH.19 AM	*	MODULATION
TOANTENNA INPUT	RFPWR	*	*
INSERT 1 KHz 30mV TO	IN'LO'	*	*
MIC INPUT	MIC GAIN	*	*
*	TOMAX	*	*

40 SECRET CB VOLUME No.28

INPUT OF DEVIATION	BAND D	VR5	ADJUST FOR 2-3 KHz DEV.
METER TO ANT INPUT	CH.19 FM	*	*
INSERT 1KHz 30mV TO	XMIT	*	*
MIKE INPUŢ	*	*	*
INPUT OF WATTMETER	BAND D	VR8	AT5WATTS RF OUTPUT
TOANTENNA INPUT	CH.19 AM	*	ADJUST SO RF PWR METER
*	MIC GAIN	*	AGREES W/WATT- METER
*	TOMIN.	*	*
*	XMIT	*	*

IMPROVED 326-G GLEN COUNTER

• FJ.BUCKLEY

THE MODIFICATION SHOWN IN VOLUME 5, PAGE 13, REQUIRED A GLEN PREAMPLIFIER. THIS AMPLIFIER IS NO LONGER AVAILABLE. THE MODIFICATION AS SHOWN WITHOUT USING THE AMPLIFIER WAS NOT SESITIVE ENOUGH FOR LOW LEVEL SIGNALS. THIS

MODIFICATION WILL PERMIT READING THE FREQUENCY OF SINGLE TRANSISTOR OSCILATOR CIRCUIT.

PARTS NEEDED:

1 DPDT SWITCH

1 PHONO JACK

1 FOOT OF RG-174/U COAX CABLE

 


FIGURE 1. GLEN 326-G

1 390pf CAPACITOR

BEFORE STARTING THE MODIFICATION, UNMODIFY, IF EARLIER MODIFICATION HAS BEEN MADE BY UNSOLDERING THE GREEN WIRE THAT RUNS FROM THE RF TAB ON THE TOP CIRCUIT BOARD TO THE OUTPUT JACK OR SWITCH, FROM THE OUTPUT JACK OR SWITCH. RESOLDER TO THE END OF THE GREEN WIRE CONNECTED TO TERMINAL "L" OF THE LOWER BOARD. (DO NOT REMOVE THE WHITE WIRE FROM THE JACK.)

MODIFICATION STEPS

- 1. DRILL A HOLE SUITABLE FOR MOUNTING THE AUDIO JACK BETWEEN THE HEATSINK AND FREQUENCY SET COIL ON THE REAR OF THE CHASSIS.
- 2. REMOVE THE LOWER BOARD BY REMOVING TWO SCREWS AND UNPLUGING.
- 3.REFER TO FIGURE 1. UNSOLDER AND REMOVE THE END OF R46 THAT IS ATTACHED TO THE B + SUPPLY.
- 4. REMOVE WIRES FROM STANDBY/ON SWITCH AND REMOVE THE SWITCH.
- 5. SOLDER THE ENDS OF BOTH WIRES JUST REMOVED TOGETHER AND INSULATE.
- 6. LOCATE R24 AND SOLDER ONE END OF THE 390of CAP TO THE TOP EXPOSED END OF THE RESISTOR.