



OUT
IN
EWPS33033X
PUSH SW KSPPH21226A

SW1 Frequency Counter ON
SW2 NB / ANL
SW3 Roger Beep
SW4 Band High / Low
SW5 Power High / Low
SW6 +10Kc

Traces around SW1-SW6 on EPT210021C

SW1 SW2 SW3
SW4 SW5 SW6

Band Switch
Position
A = Band A & E
B = Band B & F
C = Band C & G
D = Band D & F

4 Position
ROTARY SW G4N
EWR32008S

Band PCB
EPT004410Z

EWR32000S
ROTARY SW
KGPS-0501

EPT210032Z
Channel Sel. PCB

Display
EPT210041Z

Note: The wire colors used in this diagram are based on the radio used. Keep in mind that the color of the wires used could / will vary from radio to radio.

Wire Color Chart

Black	Green
Brown	Blue
Red	Violet
Orange	Gray
Yellow	White

Note: This diagram is based on a Galaxy DX88HL using an EPT055B50B Echo PCB.