


The **DOMINATOR** **2500**

MODEL D-2500 **CB ANTENNA**

Assemble the S.S. whip into the coil section as shown and tighten ferrule.

Install antenna. Antenna will normally require no tuning for a typical VSWR of 1.5:1 or less.

If VSWR is higher on channel 1 than on channel 40, loosen set screws and lengthen whip about 1/2". Recheck VSWR, if higher on channel 40 than on channel 1, loosen set screws and shorten whip about 1/2". Recheck VSWR when tuning is completed, tighten set screws securely.

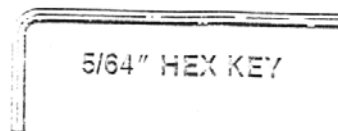

Valor Enterprises, Inc.

185 West Hamilton St., West Milton, Ohio 45383 U.S.A.

Revised 9-21-87

