


# BOMAN CB 930

SEE MASTER COPY B  
AND MASTER COPY C  
FOR FREQ CONVERSION

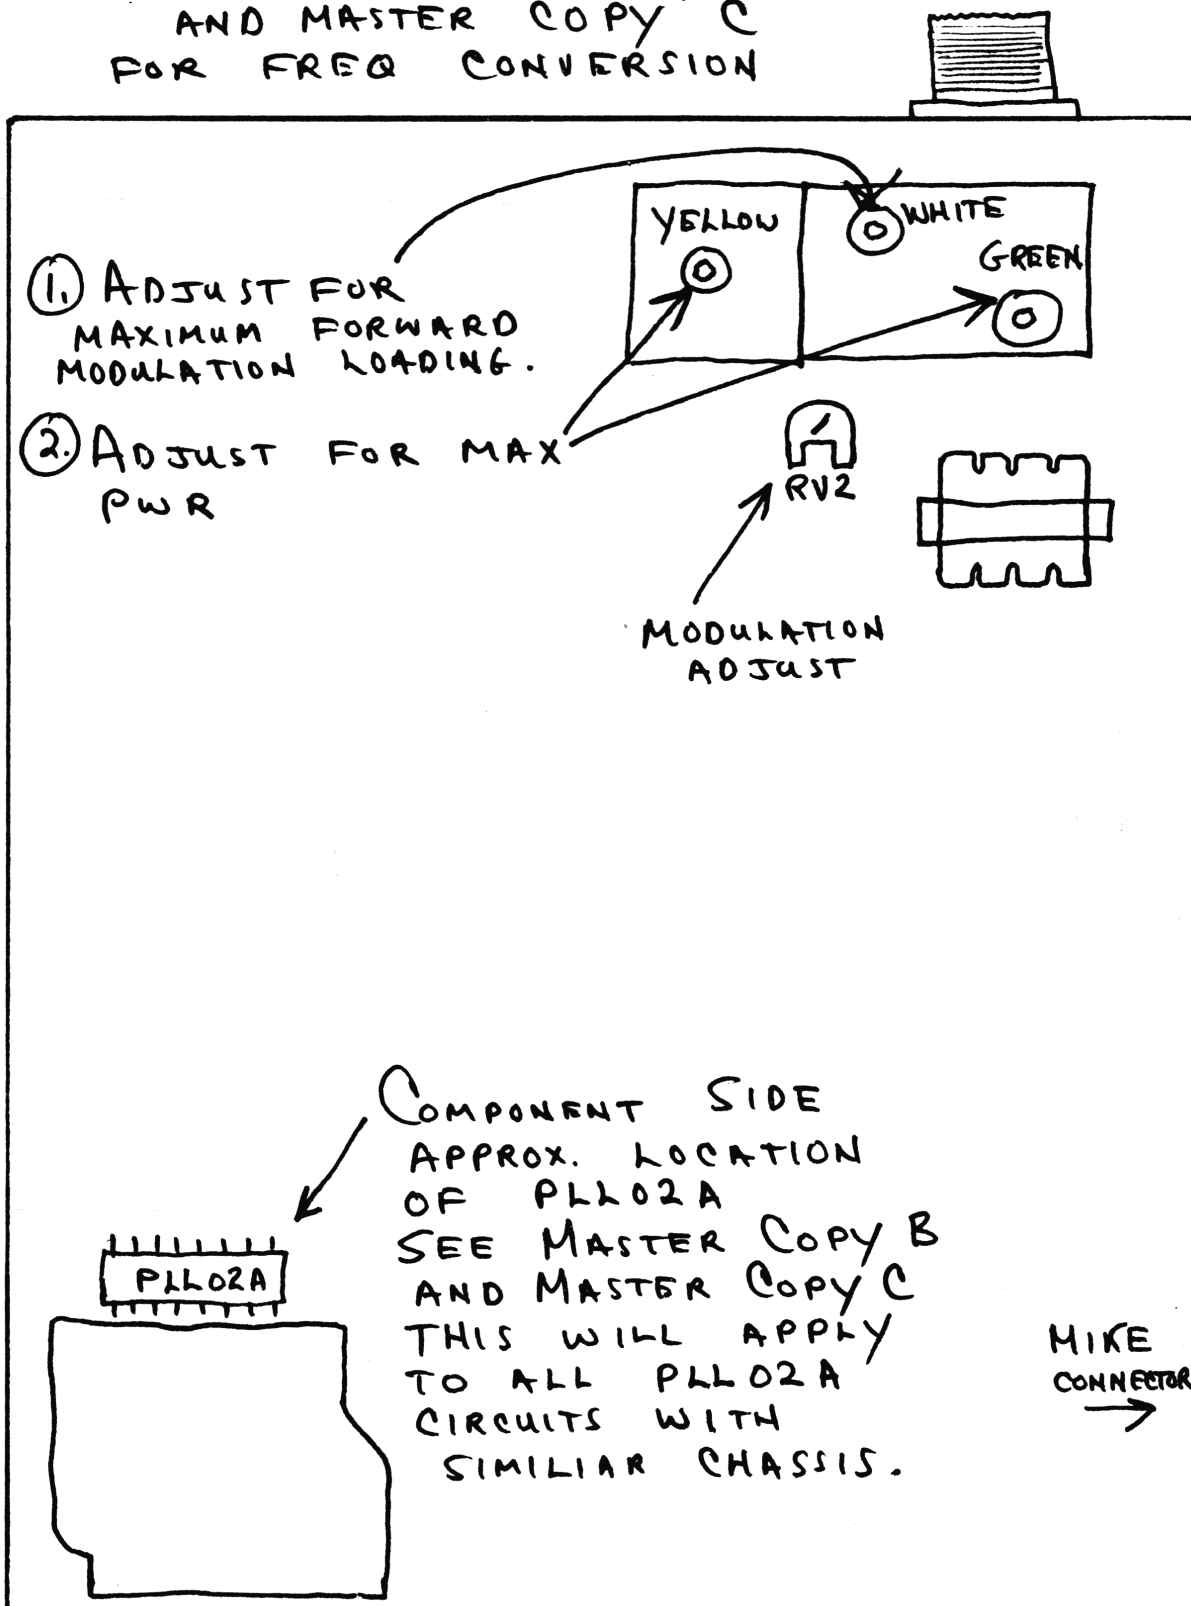

① ADJUST FOR  
MAXIMUM FORWARD  
MODULATION LOADING.

② ADJUST FOR MAX  
PWR

MODULATION  
ADJUST

COMPONENT SIDE  
APPROX. LOCATION  
OF PLL02A  
SEE MASTER COPY B  
AND MASTER COPY C  
THIS WILL APPLY  
TO ALL PLL02A  
CIRCUITS WITH  
SIMILAR CHASSIS.

MIKE  
CONNECTOR

# BOMAN CB 930