

# SPECIFIC INSTALLATION INSTRUCTIONS (CONT)

## FOR VSB-1

DWIGHT D. 1003002 -

Compressor- Remove C127. Solder BLACK wire towards R102 and WHITE wire towards R57. Remove TR16.

Expander- Remove R32. Connect BLACK wire towards C32, and WHITE wire towards the volume control.

PREAMP RECOMMENDED

PRESIDENT ANDREW J. 1012001 -

Compressor- Remove C89. Solder BLACK wire towards C96 and WHITE wire towards R53. Remove TR14.


Expander- Remove C56. Solder BLACK wire towards the common of TR10 and the WHITE wire towards R52.

NO PREAMP

PRESIDENT GRANT/MADISON (1010002) with MB8719 chip -

Compressor- Remove C101. Solder BLACK wire towards collector of TR23, and the WHITE wire towards R118.

Expander- Obtain a 1N914 diode and 100K resistor. Remove C183. Connect BLACK wire towards the common of TR43 and the WHITE wire to the anode of the 1N914 diode. Connect a 100K resistor at this junction also. Solder cathode towards pin 8 of IC6.

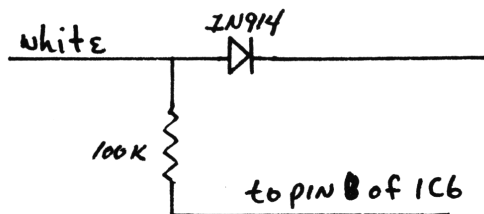

NO PREAMP