



23 CHANNEL PLL02A AM CONVERSION FOR 26.645 TO 27.275 COVERAGE

- 1.) Isolate pin 10 by cutting away from pin 9.
- 2.) wire up two SPST Switches as follows:

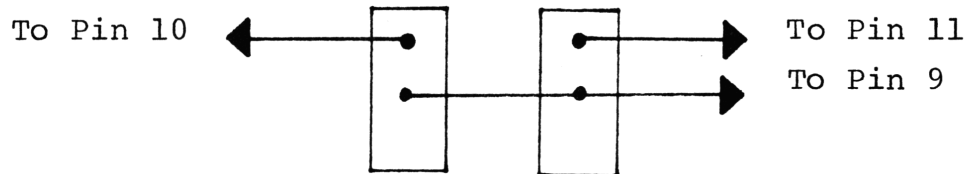


- 3.) Readjust VCO as necessary to get all channels.

If you wish, you may use the NB and ANL Switches instead of adding two additional ones.

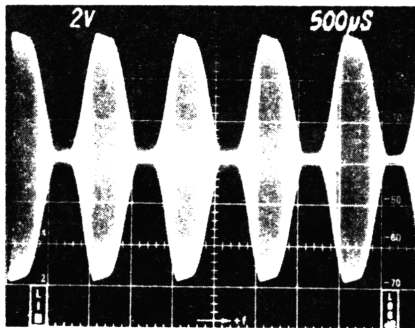

OVERMODULATION

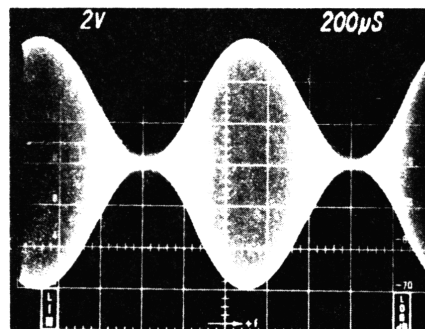

100% MODULATION