


## KENWOOD TS-530S

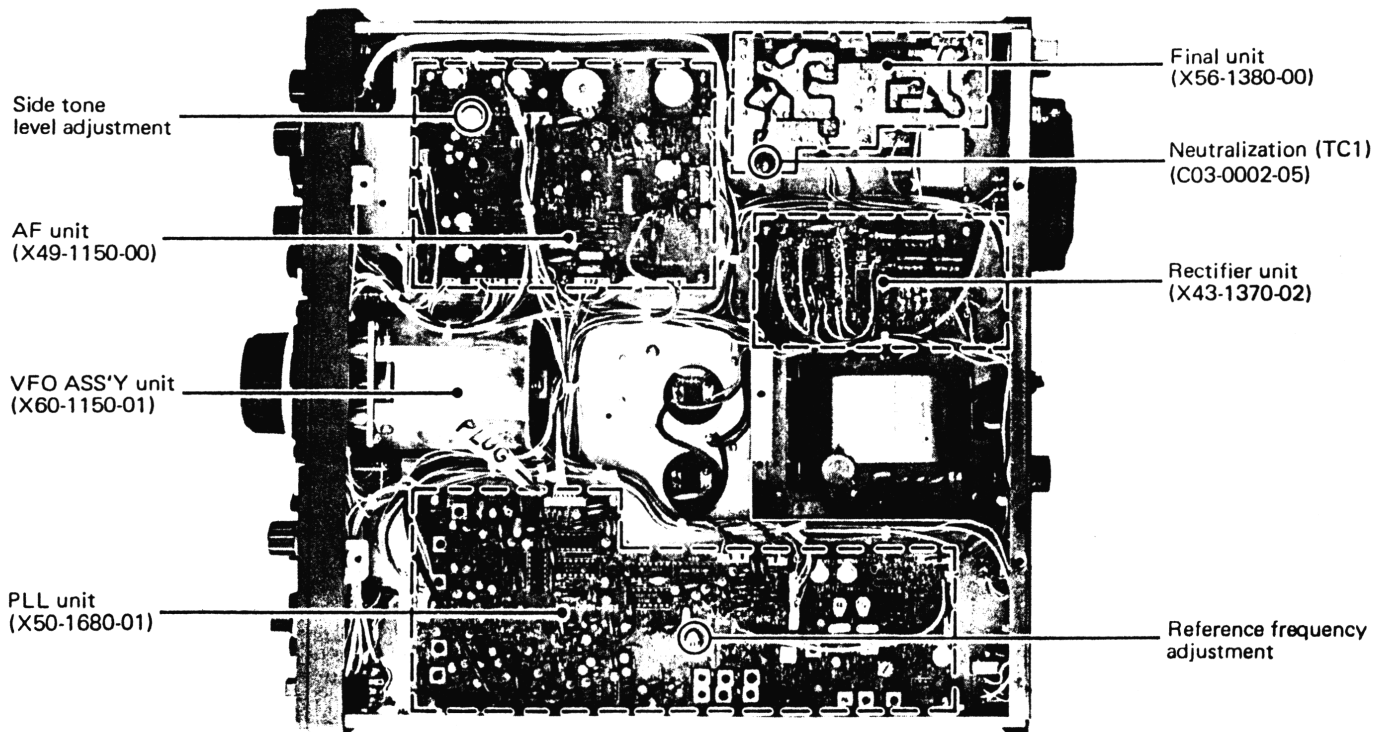

1. Locate the 6-wire plug as shown above.
2. Locate the #2 wire. It is color coded WHITE with purple stripes.
3. Remove this wire from the plug by using a small jewelers screwdriver to pry open the burrs that hold the wire in the plastic plug. Tape up the end of the wire to insulate. DO NOT CUT as this will cause other frequencies to become erratic.

The readout will indicate 28.345 or 29.845 or whatever the VFO is tuned to. Place the mode switch to 29 MHz for one band and push the button for the 28 MHz frequencies.