


MAKE YOUR "DWIGHT D" SLIDE

1. Locate, unsolder, and lift the end of R124 (10K) not connected to the base of TR21.
2. Solder one end of a piece of wire to the lifted end of the resistor.
3. Solder the other end to the BLUE wire (9V) on the Delta Tune Control.
4. Remove C132 - 3pf capacitor.

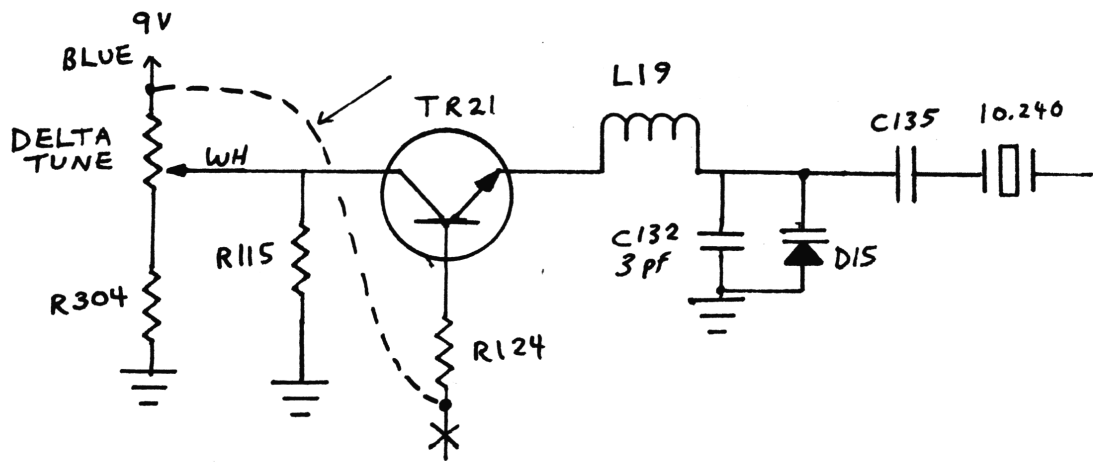

TX ALIGNMENT:

Peak L16, L15, L12, L11 for maximum output on RF Meter using 1KC tone and peak reading watt meter.

VR5 AMC or clip D14.