
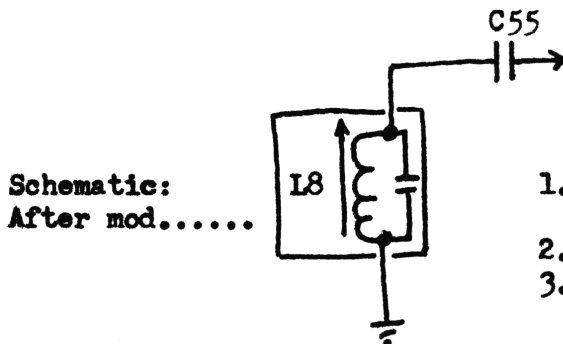


COBRA 148GTL-DX (LATE)

Receive Widebanding

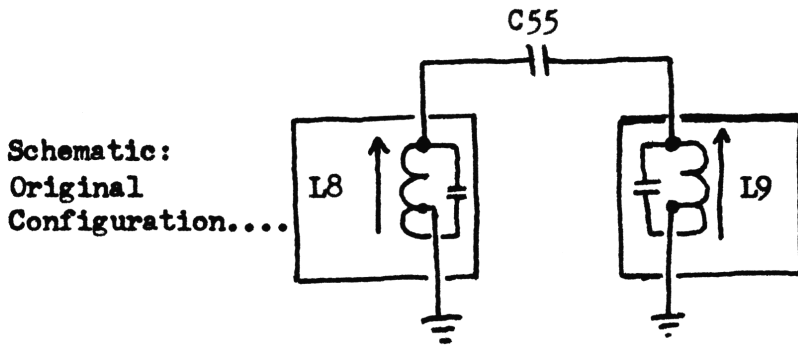

1. Isolate center pin on 3-pin side of L8.
2. Ground the unconnected pin.
3. Realign L8 and L9.

VCO Expansion

Simple: Replace R-136 (1M ohm), with a 10M ohm $\frac{1}{4}$ W 5%...

MB CHASSIS - SERVICE NOTES

1. Voltage Regulator (usually numbered IC-5; MB3756) going bad?
Especially in mobile units...

Recommended additional parts should be added to circuitry as shown:
Zener Diode and rectifier diode.....

