


Cobra 40X; "Card Kit-A" Installation

by T.S.

1. Unsolder Blue wire from Pin 20 of IC202.
2. Re-solder Blue wire to terminal P on switch, and Blank terminal on epoxy pak.
3. Add a 4.7 ohm resistor from Pin 20 of IC202 to terminal Q on switch.
4. Remove C320 from contacting Pin 4 of IC203.
5. Replace C320 to Pin 5 of IC203.
6. Install 47pf from Pin 4 of IC203, to terminal K on switch.
7. Wire from Pin 5 of IC203 to terminal J on switch.
8. Wire from terminal L of switch to Yellow terminal on epoxy pak.
9. Wire from terminal S of switch to D.C. ground.
10. Wire from pin 18 of IC202 to Red terminal on epoxy pak.

SEE DRAWING BELOW.....

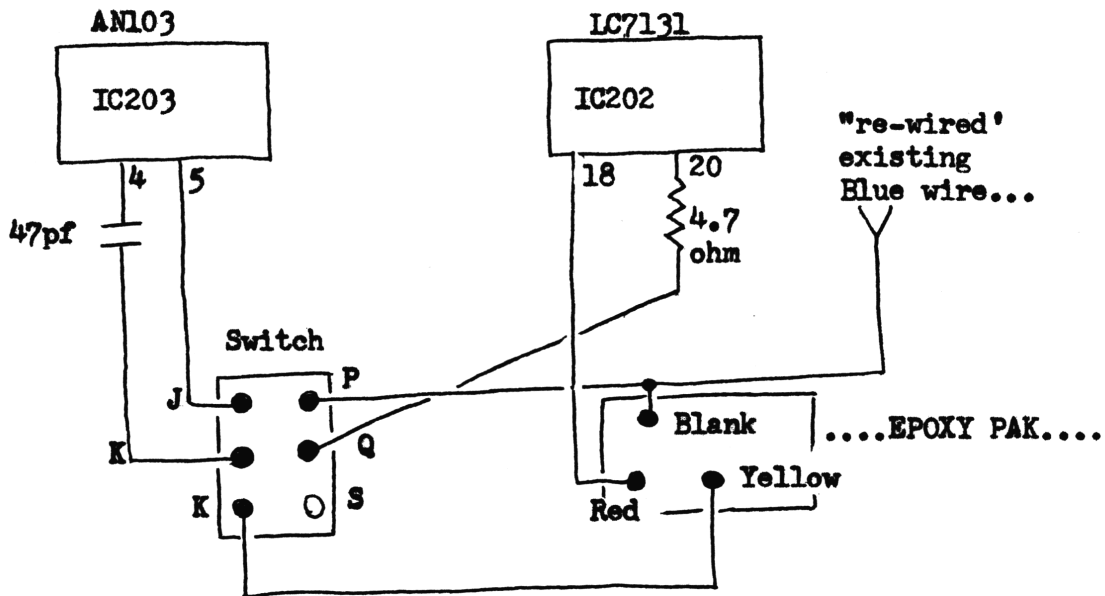

Retune TX/RX circuitry for full coverage.....

CORRECTION ON KENWOOD 430 IN VOLUME 18, PAGE 25:

DO NOT REMOVE J-10, JUST CLIP WIRES 1 and 2, LEAVE #3 WIRE AS IS.
