



# Stryker CPU Board 447/497

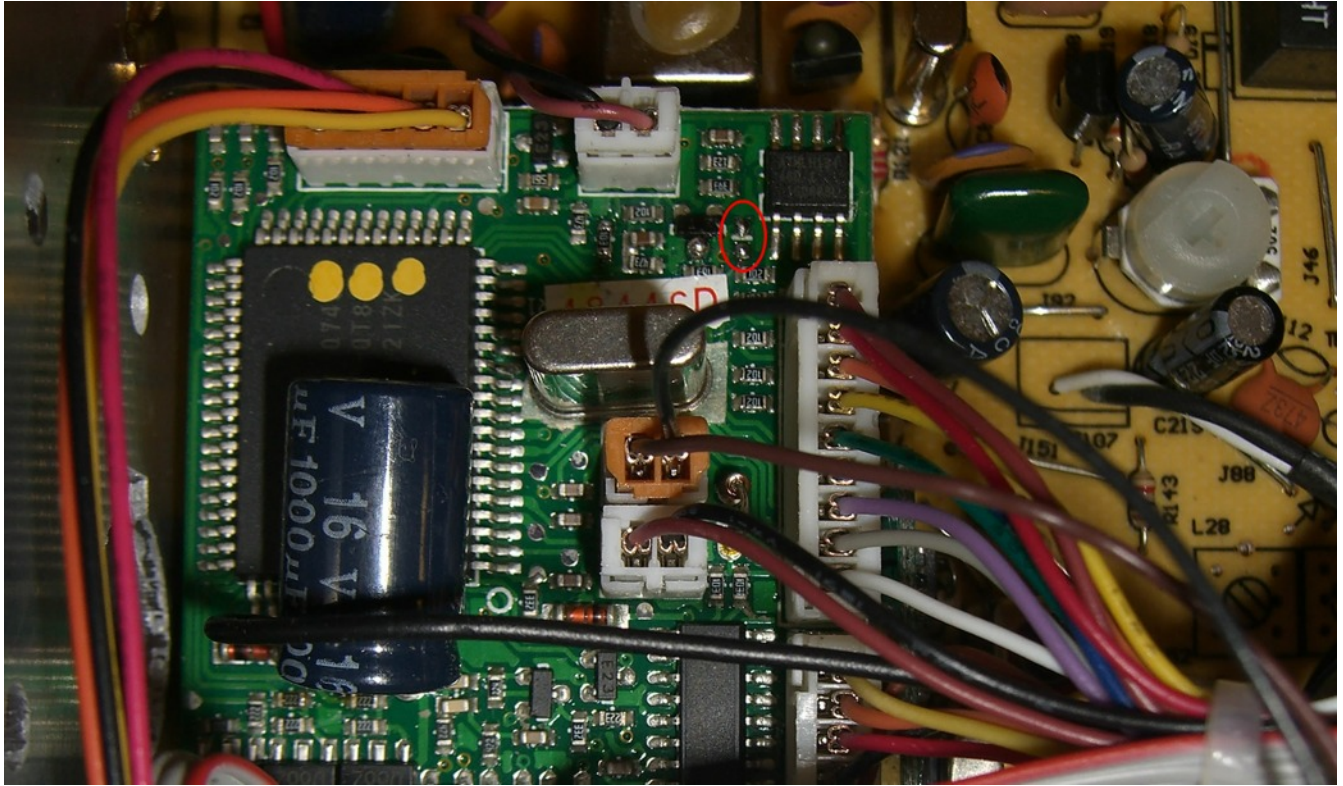

Solder bridge the two pads that are shown above in the red circle. Bridging these pads is very easy using a soldering iron with a fine tip.

# Older Modification

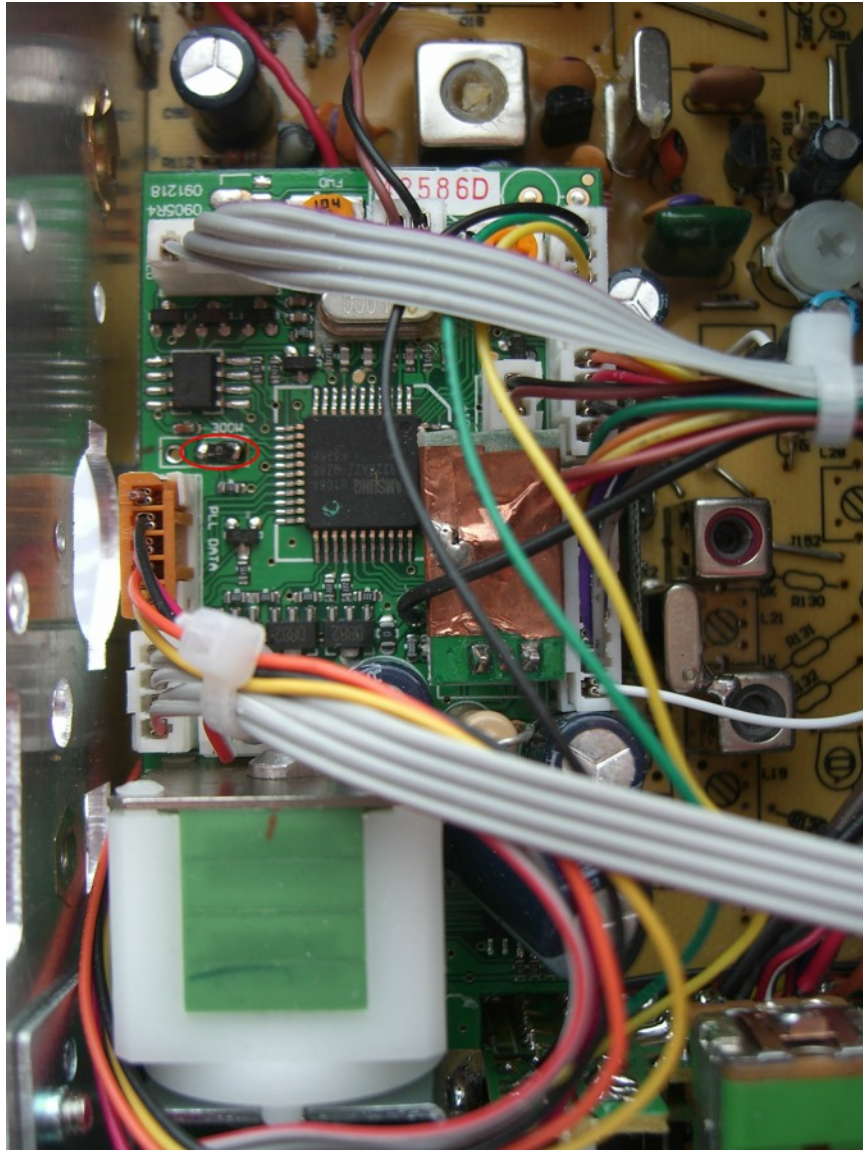

Remove the “0” ohm SMT resistor that is circled in red. There is no need to  
Move this resistor over to the left position. Remove it and the expansion is done.