
PACE 1000MC - 1000BC Continued:

## TUNE-UP continued:

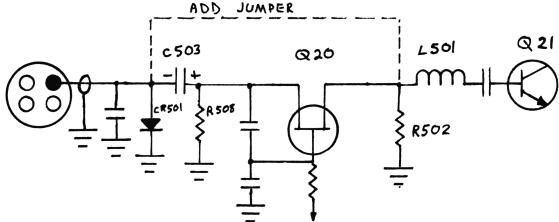

Peak L112, L109, L107 for maximum RF output.

On USB, adjust T501 for maximum RF output.

R521 AM AMC (eliminated this control if you did mod. above).

R134 SSB ALC adjust for maximum.

R103 RF output meter.

R515, C512 carrier null, Ch 19, USB, no mod.

## WIRE GUAGE CONVERSION CHART

AWG#	DIA. "		
10	.102	21	.029
12	.081	22	.025
13	.072	23	.023
14	.064	24	.020
15	.057	25	.018
16	.051	26	.016
17	.045	27	.014
18	.040	28	.013
19	.036	29	.011
20	.032	30	.010