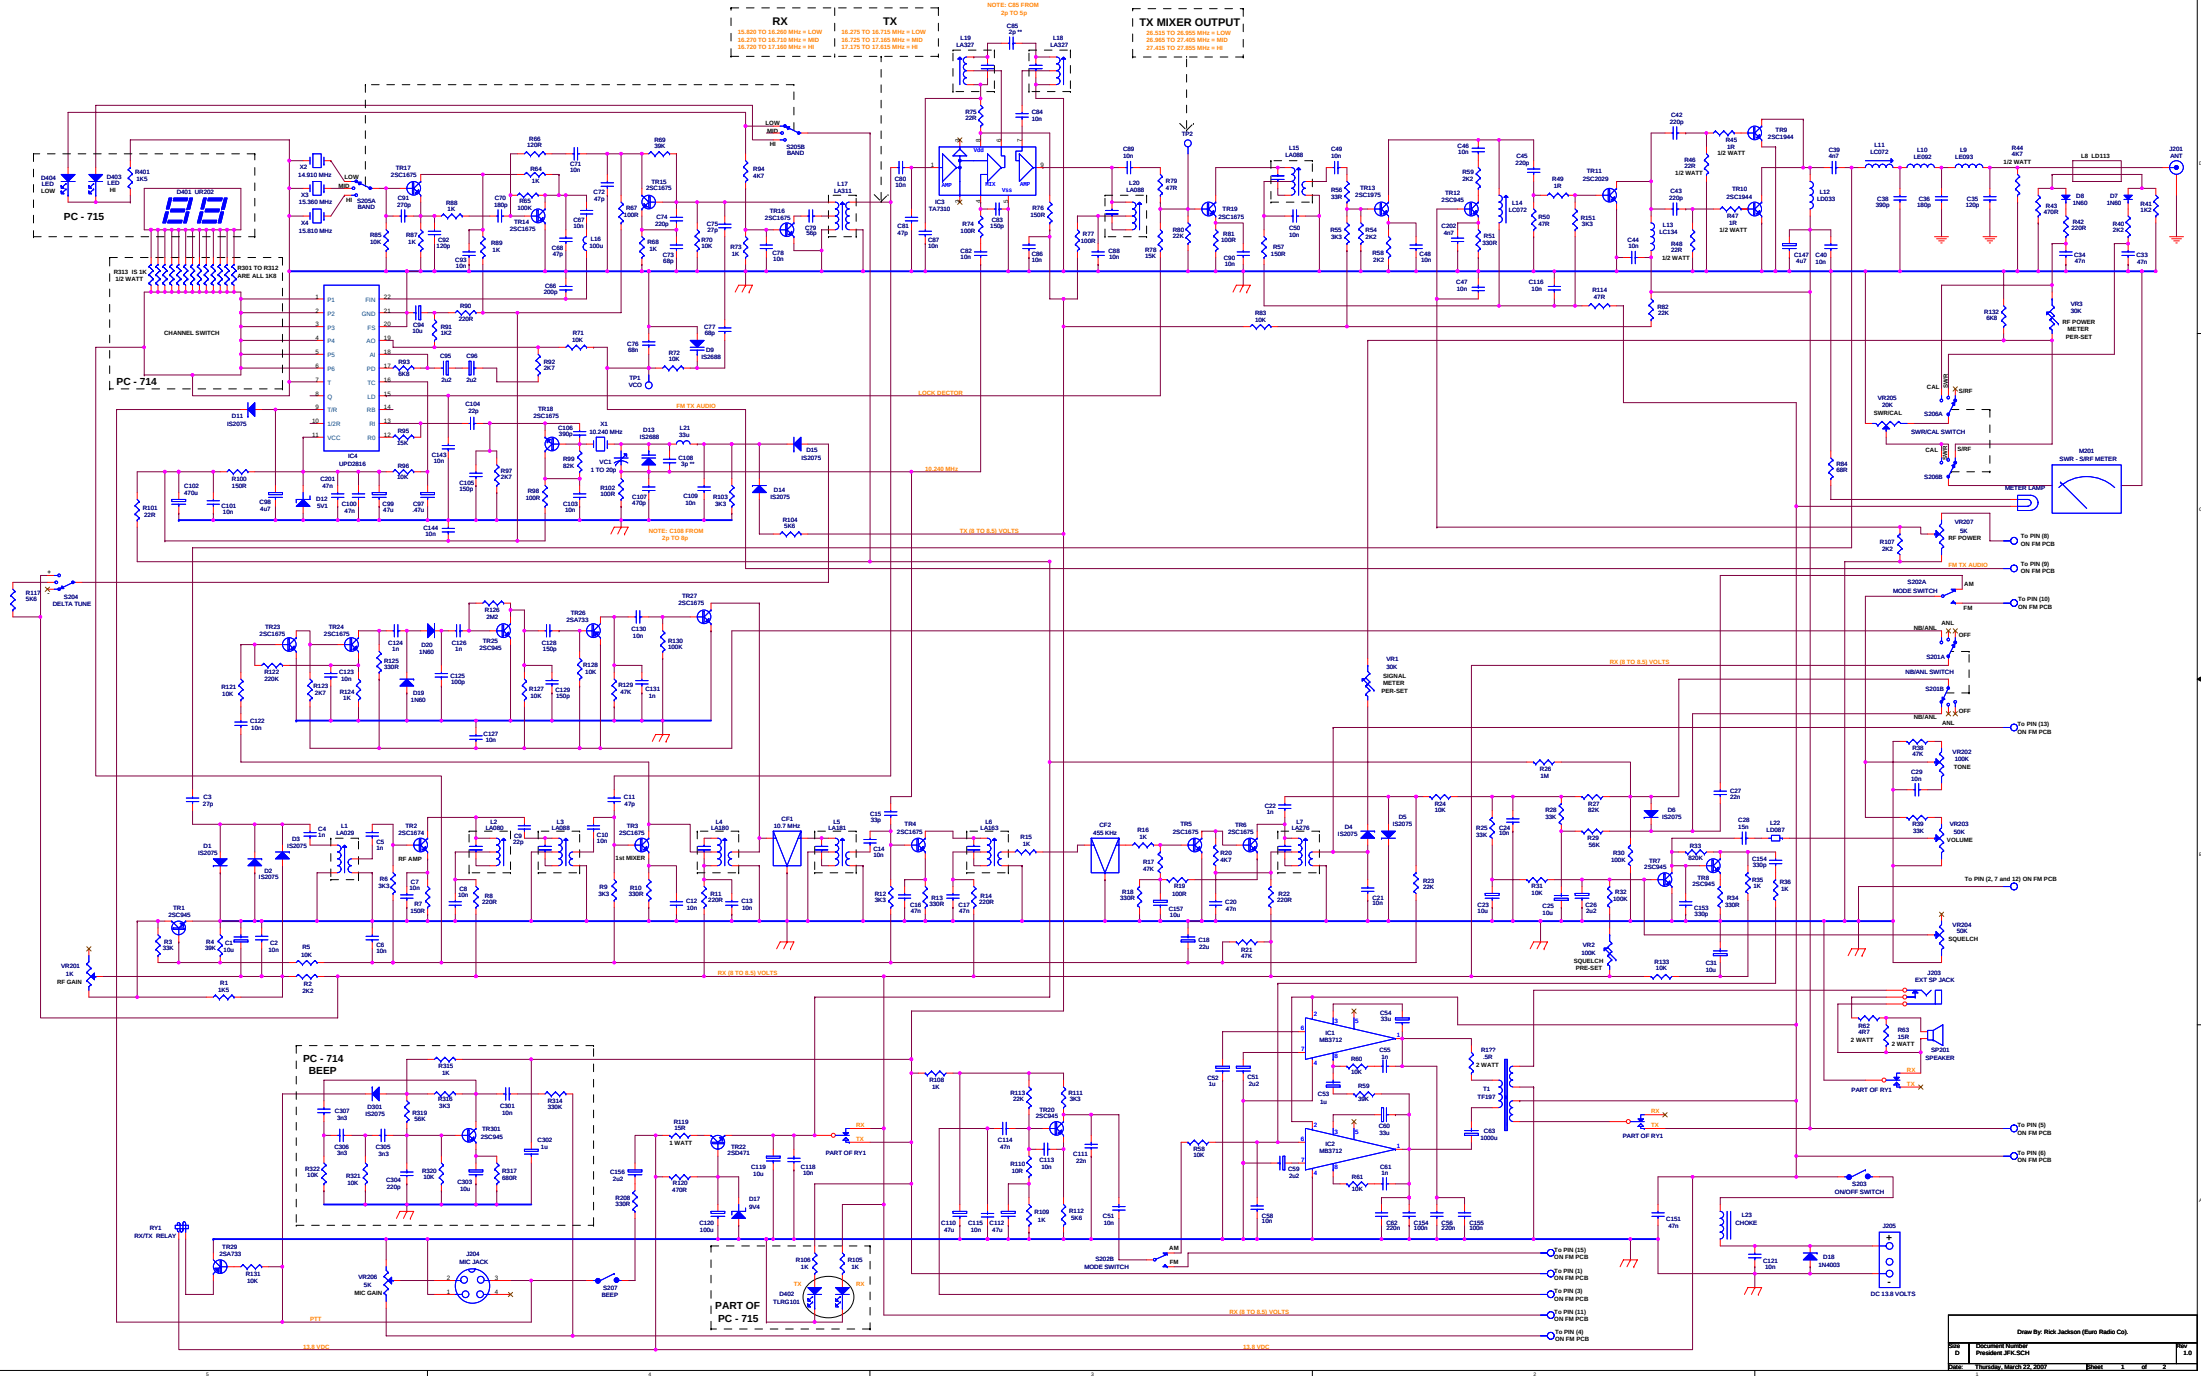
RX
15.820 TO 16.260 MHz = LOW
16.270 TO 16.710 MHz = MID
16.720 TO 17.160 MHz = HI
TX
16.275 TO 16.715 MHz = LOW
16.725 TO 17.165 MHz = MID
17.175 TO 17.615 MHz = HI
TX MIXER OUTPUT
26.515 TO 26.955 MHz = LOW
26.965 TO 27.405 MHz = MID
27.415 TO 27.855 MHz = HI
NOTE: C85 FROM 2p TO 5p
PC - 715
PC - 714
CHANNEL SWITCH
IC4 UPD2816
PC - 714 BEEP
PART OF PC - 715
RF AMP
1st MIXER
RF GAIN
DELTA TUNE
MIC GAIN
MIC JACK
BEEP
RX/TX RELAY
PTT
13.8 VDC
LOCK DECTOR
FM TX AUDIO
10.240 MHz
NOTE: C108 FROM 2p TO 8p
RX (8 TO 8.5) VOLTS
TX (8 TO 8.5) VOLTS
RF POWER METER PER-SET
SWR/CAL SWITCH
SWR - S/RF METER
METER LAMP
MODE SWITCH
NB/ANL SWITCH
TONE
VOLUME
SQUELCH
EXT SP JACK
SPEAKER
ON/OFF SWITCH
DC 13.8 VOLTS
SIGNAL METER PER-SET
SQUELCH PRE-SET
To PIN (8) ON FM PCB
To PIN (9) ON FM PCB
To PIN (10) ON FM PCB
To PIN (13) ON FM PCB
To PIN (2, 7 and 12) ON FM PCB
To PIN (5) ON FM PCB
To PIN (6) ON FM PCB
To PIN (15) ON FM PCB
To PIN (1) ON FM PCB
To PIN (3) ON FM PCB
To PIN (11) ON FM PCB
To PIN (4) ON FM PCB
Draw By: Rick Jackson (Euro Radio Co).
Size D
Document Number President JFK.SCH
Rev 1.0
Date: Thursday, March 22, 2007
Sheet 1 of 2