

This Manual is provided by
CBTricks.com

Someone who wanted to help you repair your equipment
scanned this manual.

If you would like to help us put more manuals online support us.

Supporters of CBTricks.com paid for the hosting so you would have this file.

CBTricks.com is a non-commercial personal website was created to help promote the exchange of service, modification, technically oriented information, and historical information aimed at the Citizens Band, GMRS (CB "A" Band), MURS, Amateur Radios and RF Amps.

CBTricks.com is not sponsored by or connected to any Retailer, Radio, Antenna Manufacturer or Amp Manufacturer, or affiliated with any site links shown in the links database. The use of product or company names on my web site is not endorsement of that product or company.

If your company would like to provide technical information to be featured on this site I will put up on the site as long as I can do it in a non-commercial way.

The site is supported with donation from users, friends and selling of the Galaxy Service Manual CD to cover some of the costs of having this website on the Internet instead of relying on banner ads, pop-up ads, commercial links, etc. to pay my costs. Thus I do not accept advertising banners or pop-up/pop-under advertising or other marketing/sales links or gimmicks on my website.

ALL the money from donations is used for CBTricks.com I didn't do all the work to make money (I have a day job). This work was not done for someone else to make money also, for example the ebay CD sellers.

All Trademarks, Logos, and Brand Names are the property of their respective owners.
This information is not provided by, or affiliated in any way with any radio or antenna Manufacturers.

Thank you for any support you can give.

PUBLIC ADDRESS (PA)

The Public Address (PA) function allows the audio amplifier sections to be used without activating the transmitter so that with a PA speaker connected to the PA speaker jack, the transceiver becomes a public address amplifier. With the PA/CB switch in the PA position and the microphone keyed, audio from the microphone is amplified by Q2 and coupled through C208 through the CB/PA switch to the Volume Control. The Volume Control establishes the gain provided by the Audio Preamplifier, Q5. The amplified audio is coupled from Q5 collector through the Active Filter to the Audio Power Amp, IC301. The amplified audio from the power amp is coupled through the transmit contact of relay K1 through S3-3 and to the external PA speaker.

ALIGNMENT

Carrier Oscillator

- a. Set the mode switch to LSB and connect the frequency counter to TP2, junction of C457 and R461.
- b. Adjust C510 for 7.8025 MHz.

FREQUENCY SYNTHESIZER

Frequency Adjustment

- a. Connect the frequency counter to the emitter of Q22 using an X10 RF probe. Set the Fine Tune control to mid-range and the Mode switch to LSB.
- b. Rotate the Channel Selector switch and adjust the High Frequency Oscillator frequency as listed in Table 3.

Channel Switch Position	Adjust	Frequency
1	C648	11.700 MHz
5	C647	11.750 MHz
9	C646	11.800 MHz
13	C645	11.850 MHz
17	C644	11.900 MHz
21	C643	11.950 MHz

- c. Connect the frequency counter to TP1, junction of CR601 and CR602 and adjust the synthesizer output frequencies as listed in Table 4.


Channel Switch Position	Adjust	Frequency
1	C642	19.1625 MHz
6	C641	19.2225 MHz
11	C640	19.2825 MHz
16	C639	19.3525 MHz


Synthesizer Output

- a. Set the channel selector switch to channel 13 and set the mode switch to LSB.
- b. Connect an RF voltmeter to TP1, junction of CR601 and CR602. Adjust T601, T602 and T603 for a maximum meter reading.
- c. Set the mode switch to USB and adjust T501, T502, T604, T605 and T606 for a maximum meter reading.
- d. Readjust T606 and T603 for approximately equal voltage levels for USB and LSB respectively.


RECEIVER ALIGNMENT

Connect the receiver test circuit as shown in Figure 2 and refer to Figure 5 for alignment points location. Set the squelch control fully counterclockwise, the RF gain control fully clockwise, the fine tune control to its center position and the volume control for a suitable reading.

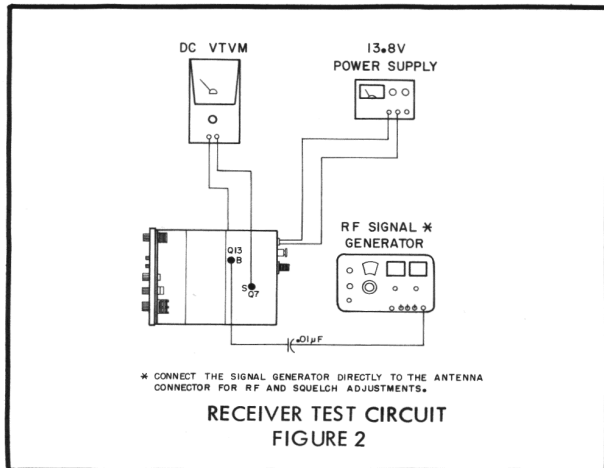

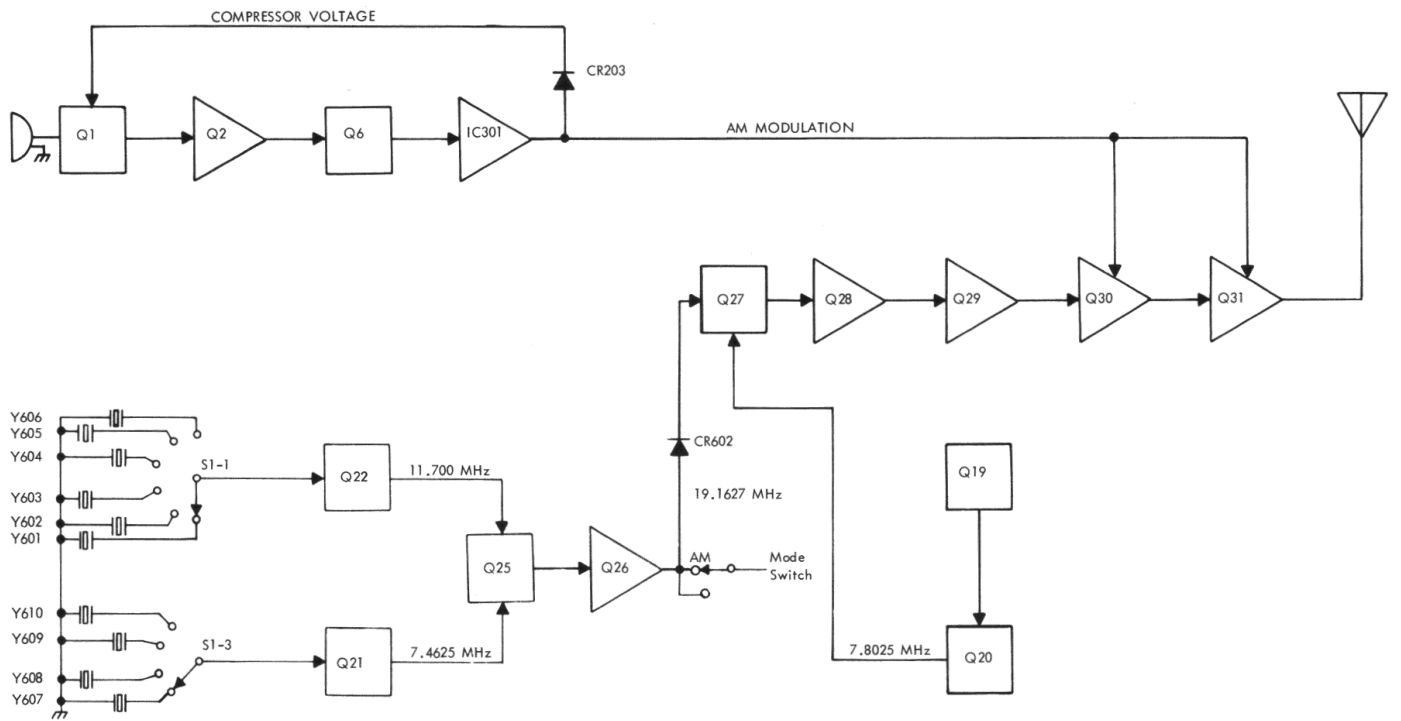

SSB TRANSMIT
BLOCK DIAGRAM

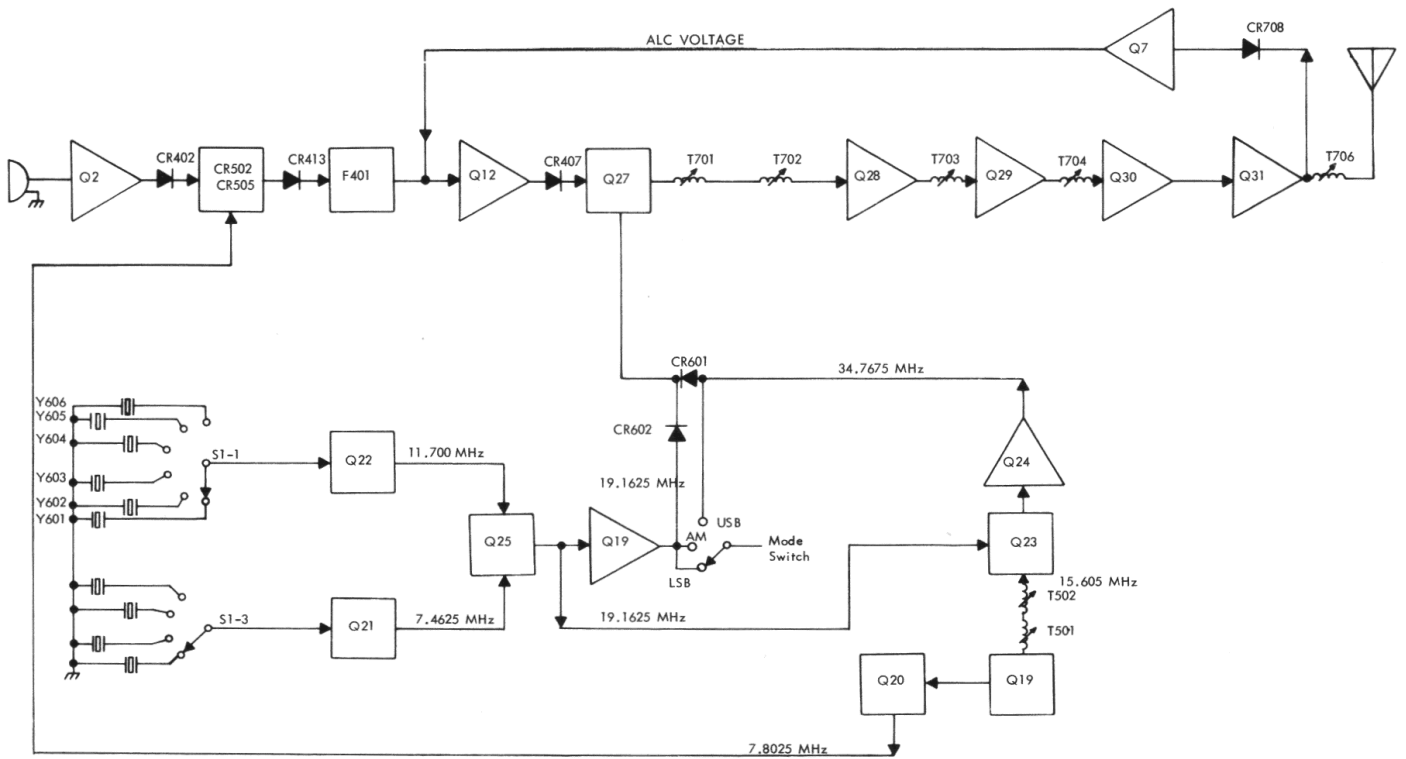

AM TRANSMIT
BLOCK DIAGRAM

RF AND IF SECTION

IF Adjustment (AM)

- a. Connect the DC voltmeter to the source of Q7 and adjust R467 for 1.7 VDC.
- b. Set the mode switch to AM and set the channel selector to channel 13. Set the signal generator to 7.8 MHz modulated 30% with 1 kHz and connect it to the base of Q13 through a ceramic 0.01 μ F capacitor.
- c. Adjust T401, T402 and T403 for maximum audio output while keeping the generator output to a minimum.

IF Adjustment (SSB)

- a. Set the mode switch to USB and connect a signal generator to the base of Q13 through a 0.01 μ F ceramic capacitor. Set the signal generator output to 7.8 MHz unmodulated.
- b. Adjust T409 for maximum audio output. Readjust T401, T402 and T403 if necessary.

RF Adjustment

- a. Set the mode switch to AM, set the channel selector switch to channel 13 and connect the signal generator to the antenna connector. Set the generator output to 27.115 MHz modulated 30% with 1 kHz.
- b. Adjust T404, T405 and T406 for maximum audio output while keeping the generator output to a minimum.

Tight Squelch Adjustment

- a. Set the mode switch to AM, set the channel selector switch to channel 13 and connect the signal generator to the antenna connector. Adjust the signal generator output for 27.115 MHz at a level of 250 μ V.
- b. Set the squelch control, on the front panel, fully clockwise then adjust R318 until the squelch just opens.

Receive Meter Adjust

- a. Set the mode switch to AM, set the channel selector switch to channel 13 and connect the signal generator to the antenna connector. Adjust the generator output for 27.115 MHz at a level of 100 μ V.
- b. Adjust R469 for an S-9 reading on the front panel meter.
- c. Change the mode switch to LSB and adjust R470 for an S-9 reading on the front panel meter with the same signal input as in step a.

Noise Blanker Adjustment

- a. Set the mode switch to AM, set the Noise Blanker switch to the NB position, set the channel selector

switch to channel 13 and connect the signal generator to the antenna connector. Set the generator output to 27.115 MHz unmodulated.

- b. Connect the RF voltmeter to TP4, gate of Q9, and adjust C460 and T408 for a maximum meter reading.
- c. Adjust T407 for a minimum meter reading with a modulated 27.115 MHz signal at the antenna connector.

Receiver First Image Trap Adjustment

- a. Set the mode switch to USB, set the channel selector switch to channel 13 and connect the signal generator to the antenna connector. Set the generator output to the first image spurious frequency at USB (channel 13 = 42.7160 MHz).
- b. Adjust C461 for a minimum audio output while keeping the generator output at a maximum.

TRANSMITTER TUNEUP


NOTE

The directional insertion wattmeter which is used to read CW signals will not read SSB peak envelope power directly. Therefore a PEP power meter should be used. If a PEP power meter is not available, the directional insertion wattmeter can be used. To convert the reading to PEP, use the following formula:

$$\text{Peak Envelope Power (PEP)} = \frac{\text{Wattmeter reading}}{0.405}$$


AM and SSB Power Adjustment

- a. Set the mode switch to AM and connect the transmitter test setup as shown in Figure 3.

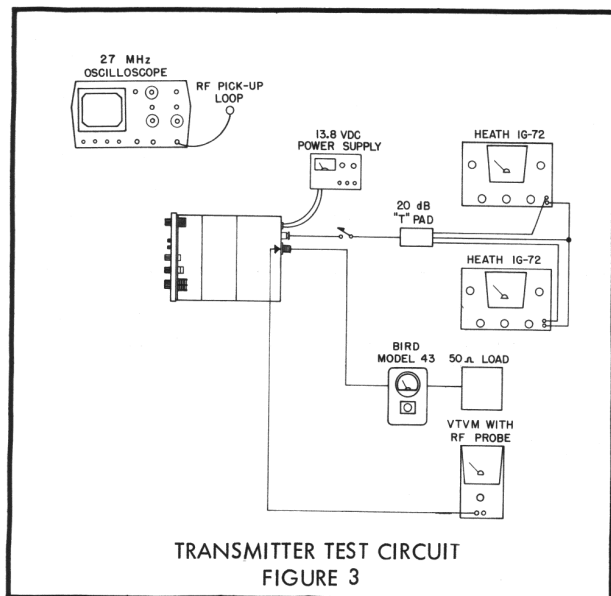

TRANSMITTER TEST CIRCUIT
FIGURE 3

- b. Key the transmitter and adjust T701, T702 and T703 for maximum power output.
- c. Set the mode switch to LSB and connect two audio generators to the microphone input as shown in Figure 4. Adjust the output of one generator to 500 Hz and the other to 2400 Hz at a level that will produce a good crossover waveform.

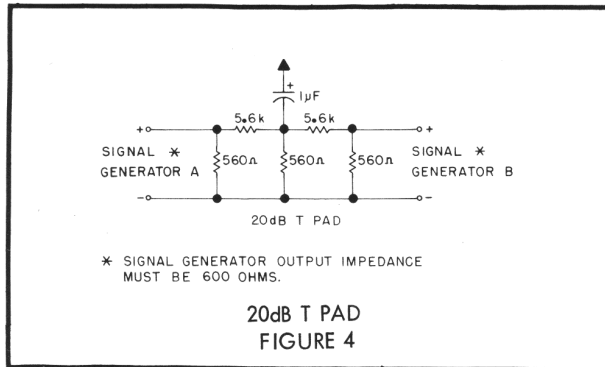

- d. Key the transmitter and adjust T704, T705 and T706 for maximum RF output while keeping the two tone audio signal input to a minimum.

NOTE

To adjust T703 and T706; melt the wax, make the adjustment and reseal with wax.

SSB Carrier Suppression Adjustment

- a. Set the mode switch to LSB and refer to the transmitter test setup.
- b. Key the transmitter, with no modulation, and adjust C511, R514 and T503 for a minimum RF voltmeter reading at the antenna, approximately 20 mV.

Automatic Level Control (ALC) Adjustment

- a. Connect the test setup as shown in Figure 3 and set the mode switch to LSB.
- b. Connect the two tone generators to the microphone input, one generator set to 500 Hz and the other at 2400 Hz.
- c. Key the transmitter and set the audio generator output level to produce 6 watts PEP (2.4 W RMS) from the transmitter.
- d. Increase the generators output level by 23 dB, and adjust R727 for a transmitter power output of 12 watts PEP (4.8 W RMS).

Automatic Modulation Limiter

- a. Connect a signal generator to the microphone connector and set the Mode switch to AM.
- b. Set the audio generator output for 1 kHz at a level sufficient to provide 50% modulation.
- c. Increase the audio generator output level 16 dB and adjust R216 for 90% modulation.

Transmitter Frequency Adjustment


- a. Connect the test setup as shown in Figure 3, set the mode switch to AM and set the channel selector switch to channel 13.
- b. Loop couple the frequency counter to L707 and key the transmitter.
- c. Adjust R626 for 27.115 MHz (unmodulated channel 13) and recheck the frequency on all channels. The transmitted frequency should be within $\pm 0.005\%$ of the channel frequency.

TABLE 3
CHANNEL FREQUENCIES


Channel	Minimum Limit (kHz)	Center Frequency (MHz)	Maximum Limit (kHz)	Channel	Minimum Limit (kHz)	Center Frequency (MHz)	Maximum Limit (kHz)
1	26,963.652	26.965	26,966.348	13	27,113.645	27.115	27,116.355
2	26,973.652	26.975	26,976.348	14	27,123.644	27.125	27,126.356
3	26,983.651	26.985	26,986.349	15	27,133.644	27.135	27,136.356
4	27,003.651	27.005	27,006.350	16	27,153.643	27.155	27,156.357
5	27,013.650	27.015	27,016.350	17	27,163.642	27.165	27,166.358
6	27,023.649	27.025	27,026.351	18	27,173.642	27.175	27,176.358
7	27,033.649	27.035	27,036.351	19	27,183.641	27.185	27,186.359
8	27,053.648	27.055	27,056.352	20	27,203.640	27.205	27,206.360
9	27,063.647	27.065	27,066.353	21	27,213.640	27.215	27,216.360
10	27,073.647	27.075	27,076.353	22	27,223.638	27.225	27,226.361
11	27,083.646	27.085	27,086.354	23	27,253.638	27.255	27,256.362
12	27,103.645	27.105	27,106.355				

NOTE:

FCC regulations require all transmitter frequencies to be within $\pm 0.005\%$ of channel center frequency.

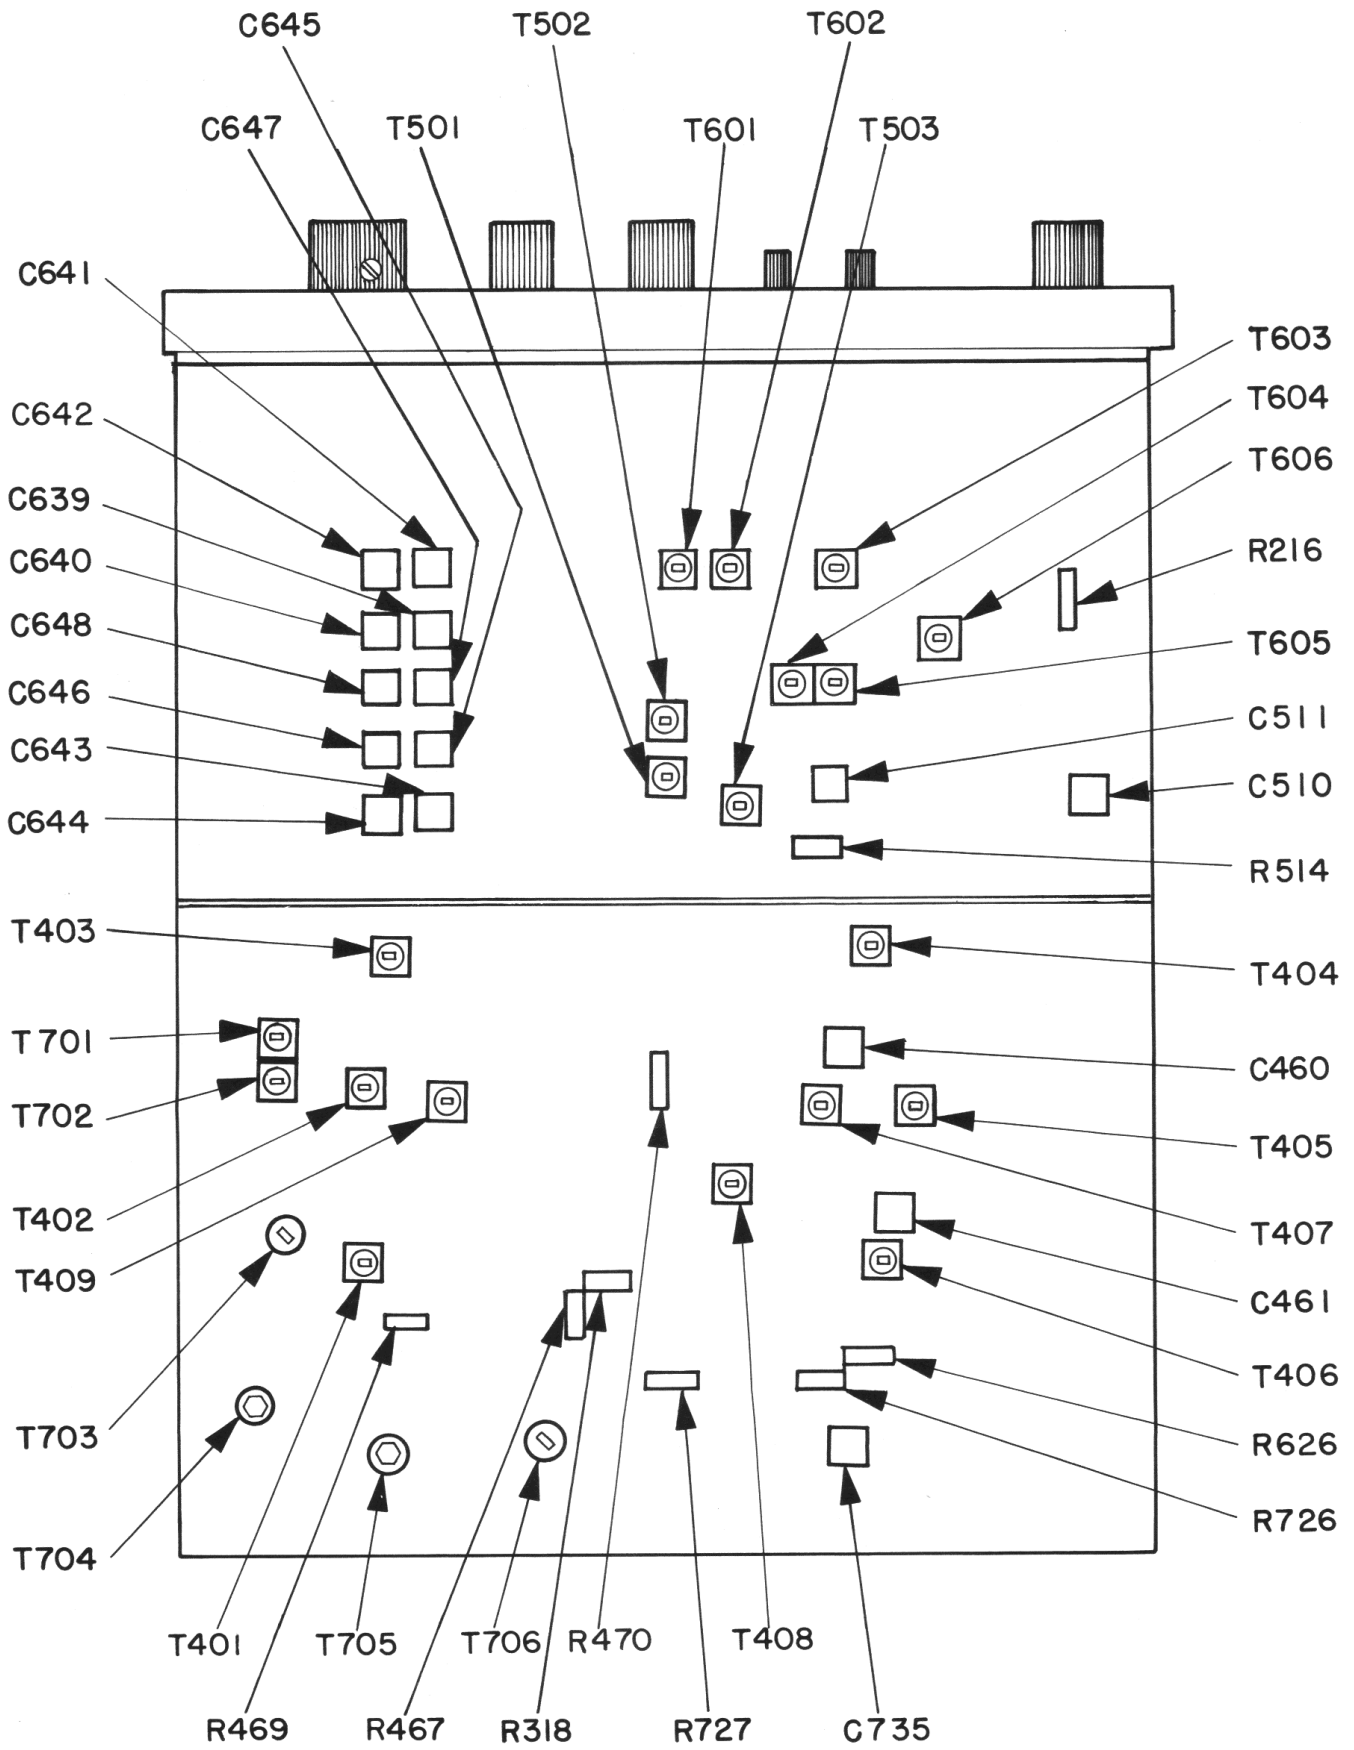

ALIGNMENT POINTS
FIGURE 5

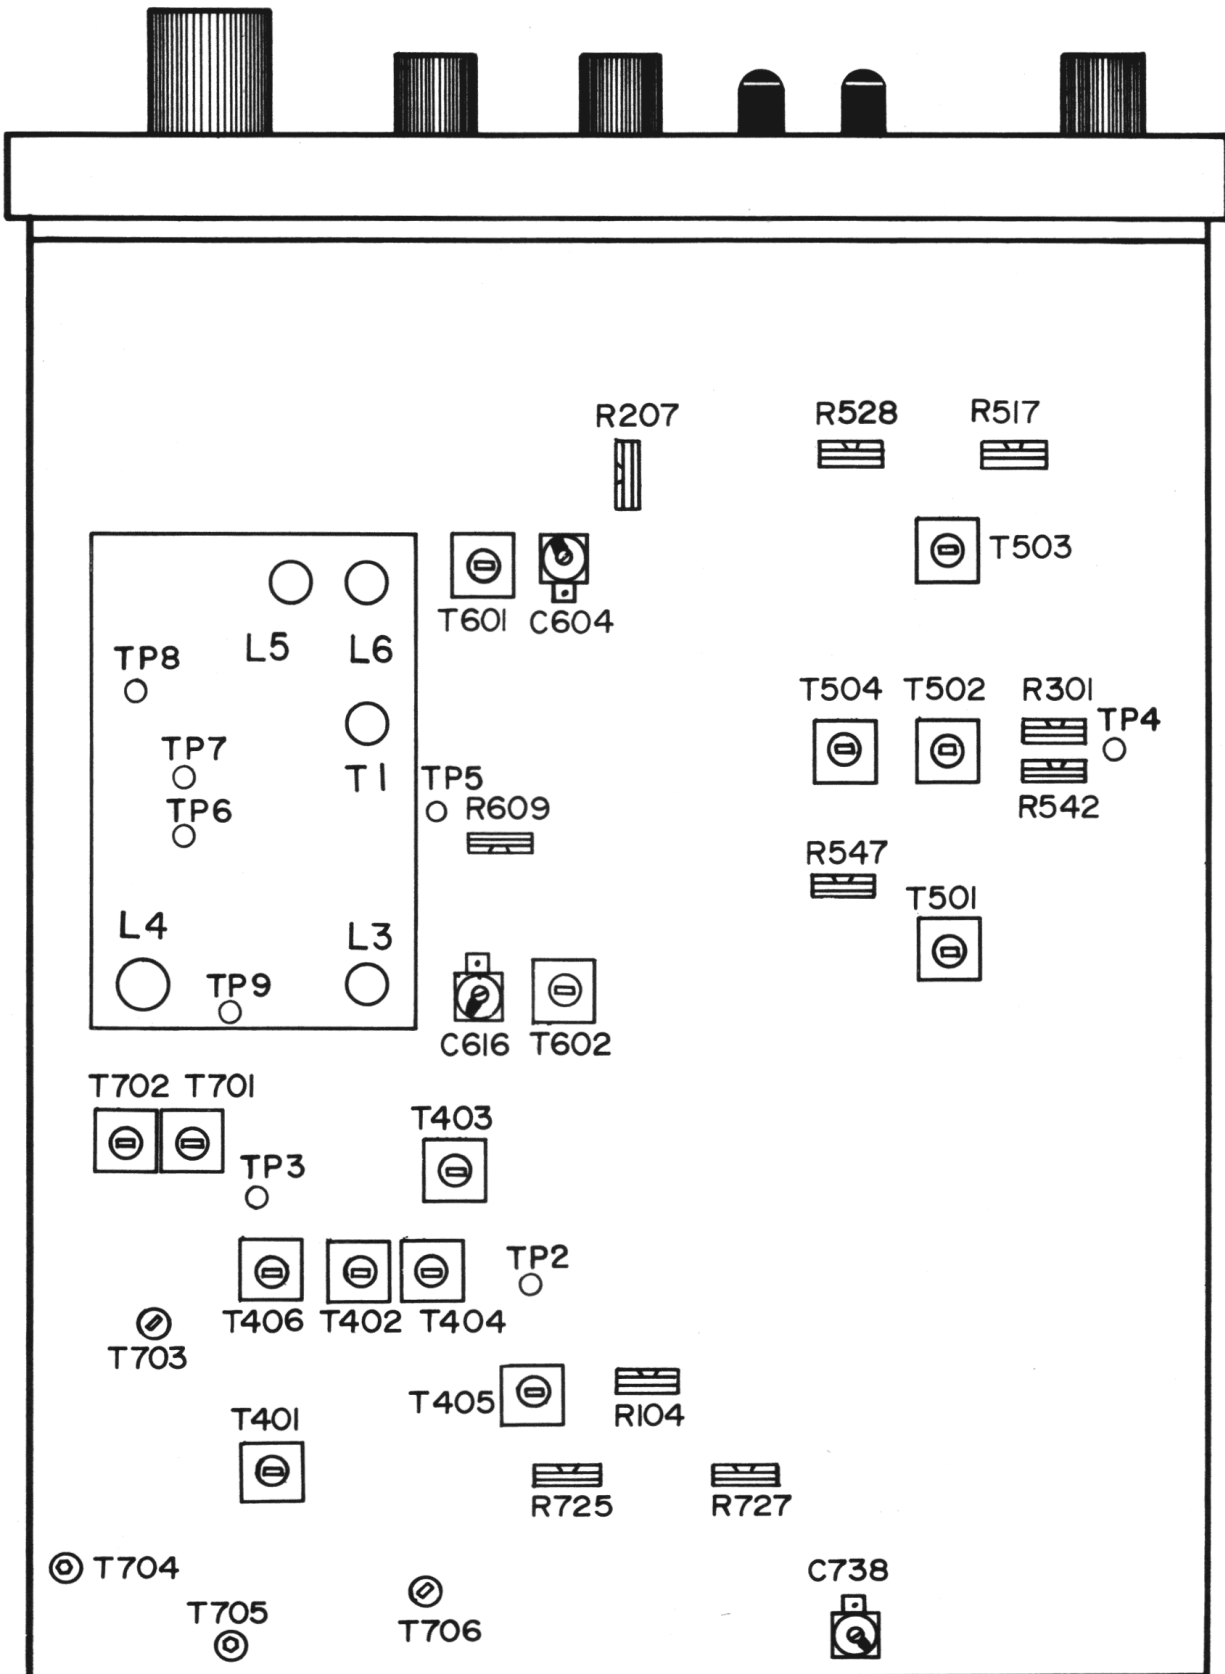

V352D ALIGNMENT POINTS

Meter

- a. Connect the test setup as shown in Figure 3 and set the mode switch to AM.
- b. Key the transmitter, unmodulated, and adjust R726 for a reading of 4 on the meter.

Harmonic Trap

This adjustment is made at the factory and it removes the second harmonic frequency from the transmitted signal. Since the second harmonic is in the 54 MHz range, it can interfere with television channel 2. Therefore if there is some question about TV interference, proceed as follows:

- a. Turn on a nearby TV and set it to channel 2.
- b. Set the transceiver channel selector to channel 13, set the Mode Switch to AM, connect a 50 Ω dummy load and key the transmitter.
- c. Adjust C735 for minimum TV interference.

DIGITAL SYNTHESIZER V352D ALIGNMENT

A. Carrier Oscillator

1. Connect the frequency counter to TP5.
2. Set the mode switch to USB and adjust T601 for 7.7975 MHz.
3. Set the mode switch to LSB and adjust C604 for 7.8025 MHz.

B. Reference Oscillator

1. Connect the frequency counter to TP8 and center the Fine Tune control.
2. Set the mode switch to AM and adjust L5 for 10.0000 MHz.
3. Set the mode switch to LSB or USB and adjust L6 for 9.9987 MHz.

C. Mixer

1. Connect the RF voltmeter to TP7.
2. Adjust T1 for a maximum meter indication.

D. Voltage Controlled Oscillator (VCO)

1. Connect a high impedance input DC voltmeter to TP6 and set the channel selector to channel 1.
2. Adjust L3 for 3 VDC.

E. Synthesizer Output

1. Connect the RF voltmeter to TP9 and set the channel selector to channel 13.
2. Adjust L4 for a maximum meter indication.

F. Synthesizer Frequency Adjustment

1. Connect the frequency counter to TP9 and set the mode switch to LSB.
2. Refer to Table 1 for synthesizer output frequencies.
3. Check the channel frequencies on the AM mode and the USB mode.

RECEIVER ALIGNMENT

A. IF Adjustment (AM)

1. Connect the DC voltmeter to the source Q508 and adjust R542 for 1.7 VDC.
2. Set the mode switch to AM and set the channel selector switch to channel 13. Set the signal generator to 7.8 MHz modulated 30% with 1 kHz and connect it to the base of Q13 through a ceramic 0.01 μ F capacitor.
3. Adjust T503, T502 and T501 for maximum audio output while keeping the generator output to a minimum.

B. IF Adjustment (SSB)

1. Set the mode switch to USB and connect a signal generator to the base of Q13 through a 0.01 μ F ceramic capacitor. Set the generator output to 7.8 MHz unmodulated.
2. Adjust T584 for maximum audio output. Readjust T503, T502 and T501 if necessary.

C. RF Adjustment

1. Set the mode switch to AM, set the channel selector switch to channel 13 and connect the signal generator to the antenna connector. Set the generator output to 27.115 MHz modulated 30% with 1 kHz.
2. Adjust T403, T402 and T401 for maximum audio output while keeping the generator output to a minimum.

D. Tight Squelch Adjustment

1. Set the mode switch to AM, set the channel selector switch to channel 13 and connect the signal

generator to the antenna connector. Set the generator output to 27.115 MHz at a level of $250\mu\text{V}$.

2. Set the front panel squelch control fully clockwise, then adjust R301 until the squelch just opens.

E. Receive Meter Adjust

1. Set the mode switch to AM, set the channel selector switch to channel 13 and connect the signal generator to the antenna connector. Adjust the generator output for 27.115 MHz at a level of $100\mu\text{V}$.
2. Adjust R517 for an S-9 reading on the front panel meter.
3. Change the mode switch to LSB and adjust R528 for an S-9 reading on the front panel meter with the same signal input as in step 1.

TRANSMITTER TUNEUP

A. AM and SSB Power Adjustment

1. Set the channel selector switch to channel 13 and connect a 50 ohm dummy load and wattmeter to the antenna connector. Set the mode switch to AM and key the transmitter.
2. Adjust T701, T702, T703 and T706 for a maximum power output of 4 watts.
3. Set the mode switch to LSB and USB.
4. Connect the 2 tone audio signal generator (500 Hz and 2400 Hz at the same output level) to the microphone input.
5. Adjust T704, T705 and T706 for maximum power output while keeping the 2 tone audio signal generator output at a minimum.

B. Automatic Level Control (ALC) Adjustment

1. Connect the 50 ohm load and wattmeter to the antenna connector and set the mode switch to LSB or USB.
2. Connect the two tone generators to the microphone input, one generator set to 500 Hz and the other at 2400 Hz.
3. Key the transmitter and set the audio gen-

erator output level to produce 6 watts PEP from the transmitter.

4. Increase the generator output level by 23 dB and adjust R725 for a transmitter power output of 12 watts PEP.

C. SSB Carrier Suppression Adjustment

1. Set the channel selector switch to channel 13, set the mode switch to LSB and connect a 50 ohm dummy load and wattmeter to the antenna connector.
2. Connect an RF voltmeter to the antenna connector.
3. Key the transmitter, with no modulation, and adjust T602, C616 and C609 for a minimum RF voltage reading at the antenna connector, approximately 20 mV.
4. Switch the mode switch to USB and adjust C616 and R609 for a balance between LSB and USB.

D. Automatic Modulation Limiter (AML)

1. Connect a dummy load and oscilloscope to the antenna connector, an audio generator to the microphone input and set the mode switch to AM.
2. Key the transmitter and set the signal generator output for 1 kHz at a level sufficient enough to provide 50% modulation.
3. Increase the audio generator level 16 dB and adjust R207 for 90% modulation.

E. Transmitter Frequency Adjustment

1. Connect a dummy load to the antenna connector, set the mode switch to AM and set the channel selector switch to channel 13.
2. Loop couple the frequency counter to L708, key the transmitter and adjust R104 for 27.115 MHz and check the frequency of all channels.

F. Transmit Meter Adjust

1. Connect a dummy load to the antenna connector and set the mode switch to AM.
2. Key the transmitter and adjust R727 for a front panel meter reading of 4.

VIKING 352 PARTS LIST

SYMBOL NO.	DESCRIPTION	PART NO.	SYMBOL NO.	DESCRIPTION	PART NO.
CAPACITORS			C416	Same as C415	
C101	Feedthru capacitor	022-2810-020	C417	0.01 μ F ceramic 50 WV	510-3002-103
C102	2200 μ F electrolytic 16 WV	022-2810-021	C418	0.04 μ F mylar 50 WV	510-1003-473
C103	220 μ F electrolytic 16 WV	022-2810-017	C419	0.001 μ F ceramic 50 WV	510-3002-102
C104	Same as C103		C420	0.04 μ F mylar 50 WV	510-1003-473
C105	Same as C103		C421	Same as C420	
C106	0.01 μ F ceramic 50 WV	510-3002-103	C422	Same as C420	
C201	Same as C106		C423	Same as C420	
C202	Same as C106		C424	Same as C420	
C203	Same as C106		C425	Same as C420	
C205	1 μ F electrolytic 50 WV	022-2810-009	C426	20 pF mica 50 WV	022-2810-005
C206	47 μ F electrolytic 16 WV	022-2810-015	C428	0.04 μ F mylar 50 WV	510-1003-473
C207	1 μ F electrolytic 50 WV	022-2810-009	C429	Same as C428	
C208	0.02 μ F \pm 20%, 16V	510-3010-223	C430	Same as C428	
C209	10 μ F electrolytic 16 WV	022-2810-013	C431	0.001 μ F ceramic 50 WV	510-3002-102
C210	0.04 mylar 50 WV	510-1003-473	C432	Same as C431	
C211	4.7 μ F electrolytic 25 WV	022-2810-019	C433	20 pF mica 50 WV	022-2810-005
C212	Same as C211		C434	0.01 μ F ceramic 50 WV	510-3002-103
C213	10 μ F electrolytic 16 WV	022-2810-013	C435	0.04 μ F ceramic 50 WV	510-1003-104
C214	0.001 μ F ceramic 50 WV	510-3001-102	C437	0.01 μ F ceramic 50 WV	510-3002-103
C215	1 μ F electrolytic 50 WV	022-2810-009	C438	Same as C437	
C216	0.01 μ F ceramic	510-3002-103	C439	3 pF mica 50 WV	022-2810-011
C301	1 μ F electrolytic 50 WV	022-2810-009	C440	5 pF mica 50 WV	022-2810-004
C302	Same as C301		C441	0.01 μ F ceramic 50 WV	510-3002-103
C303	0.01 μ F ceramic 50 WV	510-3002-103	C442	Same as C441	
C304	1 μ F electrolytic 50 WV	022-2810-009	C443	1 μ F electrolytic 50 WV	022-2810-009
C305	0.01 μ F ceramic 50 WV	510-3002-103	C444	0.01 μ F ceramic 50 WV	510-3002-103
C306	Same as C305		C445	100 pF mica 50 WV	510-3002-101
C307	0.22 μ F electrolytic 16 WV	022-2810-014	C446	0.1 μ F mylar 50 WV	510-1003-104
C308	47 μ F electrolytic 16 WV	022-2810-015	C447	0.04 μ F mylar 50 WV	510-1003-473
C309	0.01 μ F mylar 50 WV	022-2810-022	C448	1 pF mica 50 WV	022-2810-012
C310	Same as C309		C449	0.04 mylar 50 WV	510-1003-473
C311	0.0047 μ F mylar 50 WV	022-2810-016	C450	Same as C449	
C312	0.01 μ F mylar 50 WV	510-1003-103	C451	1 μ F electrolytic 50 WV	022-2810-009
C313	0.01 μ F ceramic 50 WV	510-3002-103	C452	0.01 mylar 50 WV	022-2810-022
C314	47 μ F electrolytic 16 WV	022-2810-015	C453	10 μ F electrolytic 16 WV	022-2810-013
C315	220 μ F electrolytic 16 WV	022-2810-017	C454	0.01 μ F ceramic 50 WV	510-3002-103
C316	120 pF mica 50 WV	510-3002-121	C455	1 pF electrolytic 50 WV	022-2810-009
C317	300 pF mica 50 WV	510-3002-301	C456	Same as C455	
C318	0.1 μ F mylar 50 WV	510-1003-104	C457	15 pF mica 50 WV	510-3002-150
C319	0.033 μ F mylar 50 WV	510-1003-333	C458	0.01 μ F ceramic 50 WV	510-3002-103
C320	47 μ F electrolytic 16 WV	022-2810-015	C459	47 pF mica 50 WV	510-0002-470
C321	470 μ F electrolytic 16 WV	022-2810-018	C460	40 pF trim	022-2812-001
C322	220 μ F electrolytic 16 WV	022-2810-017	C461	10 pF trim	022-2812-004
C323	Same as C322		C462	0.04 mylar 50 WV	510-1003-473
C324	0.1 μ F mylar 50 WV	510-1003-104	C463	56 pF mylar	022-2810-002
C325	1 μ F electrolytic 50 WV	022-2810-009	C464	1 μ F electrolytic 50 WV	022-2810-009
C326	10 μ F electrolytic 16 WV	022-2810-013	C465	0.04 mylar 50 WV	510-1003-473
C401	0.01 μ F ceramic 50 WV	510-3002-103	C466	Same as C465	
C402	1 μ F electrolytic 50 WV	022-2810-009	C467	0.47 μ F electrolytic 50WV	022-2810-025
C403	0.1 μ F mylar 50 WV	510-1003-104	C468	4.7 μ F electrolytic 25WV	022-2810-019
C404	0.01 μ F ceramic 50 WV	510-3002-103	C469	60 pF mica	022-2810-024
C405	1 μ F electrolytic 50 WV	022-2810-009	C470	60 pF mica	022-2810-024
C406	0.001 μ F ceramic 50 WV	510-3002-102	C501	22 pF ceramic NPO 50 WV	510-3013-220
C407	20 pF mica 50 WV	022-2810-005	C502	500 pF mica 50 WV	510-3002-511
C408	Same as C407		C503	150 pF mica 50 WV	510-3002-151
C409	0.01 μ F ceramic 50 WV	510-3002-103	C504	0.01 μ F ceramic 50 WV	510-3002-103
C410	20 pF mica 50 WV	022-2810-005	C505	15 pF mica 50 WV	510-3002-150
C411	0.01 μ F ceramic 50 WV	510-3002-103	C506	2 pF 500 WV	510-9002-209
C412	20 pF mica 50 WV	022-2810-005	C507	0.01 μ F ceramic 50 WV	510-3002-103
C413	0.01 μ F ceramic 50 WV	510-3002-103	C508	0.001 μ F ceramic 50 WV	510-3002-102
C414	15 pF mica 50 WV	510-3002-150	C509	0.01 μ F ceramic 50 WV	510-3002-103
C415	4.7 pF mica 50 WV	022-2810-010	C510	20 pF trim	022-2812-003
			C511	10 pF trim	022-2812-004

PARTS LIST (cont'd)

SYMBOL NO.	DESCRIPTION	PART NO.	SYMBOL NO.	DESCRIPTION	PART NO.
C512	100 pF mica 50 WV	510-3002-101	C712	Same as C711	
C513	Same as C512		C713	Same as C711	
C514	5 pF mica 50 WV	022-2810-004	C714	30 pF mica 50 WV	022-2810-003
C515	0.01 μ F ceramic 50 WV	510-3002-103	C715	100 pF mica 50 WV	510-3002-101
C601	100 pF mica 50 WV	510-3002-101	C716	0.01 μ F ceramic 50 WV	510-3002-103
C602	300 pF mica 50 WV	510-3002-301	C717	Same as C716	
C603	0.01 μ F ceramic 50 WV	510-3002-103	C718	85 pF mica 50V	022-2810-026
C604	2 pF mica 50 WV	022-2810-001	C719	150 pF mica 50 WV	510-3002-151
C605	100 pF mica 50 WV	510-3002-101	C720	0.01 μ F ceramic 50 WV	510-3002-103
C606	300 pF mica 50 WV	510-3002-301	C721	Same as C720	
C607	0.01 μ F ceramic 50 WV	510-3002-103	C722	150 pF mica 50 WV	510-3002-151
C608	10 pF mica 50 WV	510-3002-100	C723	20 pF mica 50 WV	022-2810-005
C609	0.01 μ F ceramic 50 WV	510-3002-103	C724	400 pF mica 50 WV	022-2810-006
C610	Same as C609		C725	2 pF mica 50 WV	022-2810-007
C611	1P 500V	510-9002-109	C726	0.01 μ F ceramic 50 WV	510-3002-103
C612	56 pF 500V	022-2810-002	C727	65 pF mica 50 WV	022-2810-008
C613	0.01 μ F ceramic 50 WV	510-3002-103	C728	200 pF mica 50 WV	510-3002-201
C614	Same as C613		C729	0.01 μ F ceramic 50 WV	510-3002-103
C615	Same as C613		C730	0.1 μ F mylar 50 WV	510-1003-104
C616	2 pF 500V	510-9002-209	C731	0.01 μ F ceramic 50 WV	510-3002-103
C617	100 pF mica 500V	510-3002-101	C732	100 pF mica 50 WV	510-3002-101
C618	0.01 μ F ceramic 50 WV	510-3002-103	C733	1 μ F electrolytic 50 WV	022-2810-009
C619	220 pF mica 50 WV	510-3002-221	C734	0.01 μ F ceramic 50 WV	510-3002-103
C620	0.01 μ F ceramic 50 WV	510-3002-103	C737	22 μ F	022-2810-023
C621	22 pF ceramic 50 WV	510-3013-220	C738	10 μ F electrolytic 16 WV	022-2810-013
C622	Same as C621		C801	0.01 μ F ceramic 50 WV	510-3002-103
C623	Same as C621		C802	Same as C801	
C624	Same as C621		C803	Same as C801	
C625	30 pF ceramic 50 WV	022-2810-003	C804	Same as C801	
C626	Same as C625		C805	Same as C801	
C627	Same as C625		C806	0.04 μ F mylar 50 WV	510-1003-473
C628	Same as C625		C807	Same as C806	
C629	Same as C625			DIODES	
C630	Same as C625				
C631	15 pF mica 50 WV	510-3002-150	CR101	Silicon, U05B	022-2823-001
C632	0.01 μ F ceramic 50 WV	510-3002-103	CR102	Zener 9V 1W BX090	022-2823-002
C633	0.04 μ F mylar 50 WV	510-1003-473	CR103	Same as CR102	
C634	0.01 μ F ceramic 50 WV	510-3002-103	CR104	Same as CR102	
C635	Same as C634		CR201	Germanium 1N60	022-2823-003
C636	Same as C634		CR202	Silicon WG713	022-2823-004
C637	56 pF mica 50 WV	510-3002-560	CR203	Germanium 1N60	022-2823-003
C638	0.001 μ F ceramic 50 WV	510-3002-102	CR204	Silicon U05B	022-2823-001
C639	40 pF trim	022-2812-001	CR301	Germanium 1N60	022-2823-003
C640	Same as C639		CR401	Same as CR301	
C641	Same as C639		CR402	Silicon WG713	022-2823-004
C642	Same as C639		CR403	Same as CR402	
C643	30 pF trim	022-2812-002	CR404	Same as CR402	
C644	Same as C643		CR405	Germanium 1N60	022-2823-003
C645	Same as C643		CR406	Silicon WG713	022-2823-004
C646	Same as C643		CR407	Same as CR406	
C647	Same as C643		CR408	Germanium 1N60	022-2823-003
C648	Same as C643		CR409	Same as CR408	
C649	0.01 μ F ceramic 50 WV	510-3002-103	CR410	Same as CR408	
C650	Same as C649		CR411	Same as CR408	
C651	Same as C649		CR412	Same as CR408	
C652	Same as C649		CR413	Same as CR408	
C701	100 pF mica 50 WV	510-3002-101	CR414	Silicon WG713	022-2823-004
C702	5 pF mica 50 WV	022-2810-004	CR415	Silicon 1S2472	022-2823-005
C703	0.01 μ F ceramic 50 WV	510-3002-103	CR416	Same as CR415	
C704	Same as C703		CR417	Germanium 1N60	022-2823-003
C705	100 pF mica 50 WV	510-3002-101	CR418	Same as CR417	
C706	1 pF 500V	510-9002-109	CR419	Silicon WG713	022-2823-004
C707	220 pF 500V	510-3002-221	CR420	Same as CR419	
C708	0.01 μ F ceramic 50 WV	510-3002-103	CR421	Same as CR419	
C709	Same as C708		CR422	Germanium 1N60	022-2823-003
C710	130 pF mica 50 WV	510-3002-131	CR423	Same as CR422	
C711	0.01 μ F ceramic 50 WV	510-3002-103			

PARTS LIST (cont'd)

SYMBOL NO.	DESCRIPTION	PART NO.	SYMBOL NO.	DESCRIPTION	PART NO.
CR424	Germanium 1N34A	022-2823-006	L402	Same as L401	
CR425	Silicon WG713	022-2823-004	L403	22 μ H choke	542-3002-002
CR501	Same as CR425		L404	1 μ H choke	542-3002-001
CR502	Germanium 1N60P	022-2823-007	L501	22 μ H choke	542-3002-002
CR503	Same as CR502		L502	150 μ H choke	022-2842-003
CR504	Same as CR502		L601	5.5 μ H choke	022-2842-004
CR505	Same as CR502		L602	470 μ H choke	022-2842-002
CR601	Silicon WG713	022-2823-004	L603	Same as L602	
CR602	Same as CR601		L604	0.22 μ H choke	022-2842-005
CR603	Germanium 1S1007	022-2823-008	L608	22 μ H choke	542-3002-002
CR604	Silicon WG713	022-2823-004	L701	0.65 μ H choke	022-2842-006
CR605	Same as CR604		L702	Same as L701	
CR606	Silicon 1S2888	022-2823-009	L703	0.22 μ H choke	022-2842-005
CR701	Zener 0.7V 250 mW	022-2823-010	L704	22 μ H choke	542-3002-002
CR702	Same as CR701		L705	Same as L704	
CR703	Same as CR701		L706	0.65 μ H choke	022-2842-006
CR704	Silicon 10D4	022-2823-011	L707	0.22 μ H choke	022-2842-005
CR705	Same as CR704		L708	C997ND 27 MHz ant	022-2842-007
CR706	Germanium 1N60	022-2823-003	L714	1.2 μ H choke	022-2842-008
CR707	Same as CR706				
CR708	Same as CR706			METER	
CR709	Same as CR706				
	LAMPS		M1	Meter	022-2854-001
DS101	14V 75 mA	022-2849-001		TRANSISTORS	
DS102	16V 40 mA	022-2849-002	Q1	FET limiter	022-2876-001
DS103	Same as DS102		Q2	NPN mic amp	022-2876-002
DS104	Same as DS102		Q3	NPN squelch amp.	022-2876-003
DS105	Same as DS102		Q4	PNP squelch gate	022-2876-004
DS106	Red 16V 40 mA	022-2849-003	Q5	NPN audio preamp	022-2876-003
	FUSES		Q6	NPN active filter	022-2876-003
F101	Fuse, 3A 250V	534-0003-026	Q7	FET AGC amp	022-2876-005
F301	Fuse (pigtail) 1.5A	022-2834-001	Q8	FET blanker gate	022-2876-001
TB302	Terminal strip	586-1001-019	Q9	FET noise amp	022-2876-006
	FILTER		Q10	NPN IF amp	022-2876-007
F401	Crystal filter 7.8 MHz	022-2832-501	Q11	Same as Q10	
	IC		Q12	Same as Q10	
IC301	HA1339 audio amp	022-2844-001	Q13	Same as Q10	
IC401	Noise amp μ A703	022-2844-002	Q14	FET receive mixer	022-2876-013
	CONNECTORS		Q15	FET RF amp	022-2876-009
J101	Mic connector	515-1003-001	Q16	NPN SSB detector	022-2876-007
J301	3.5 connector (P. A. Spkr. Jack)	022-2815-001	Q17	Same as Q16	
J302	Same as J301 (Ext. Spkr. Jack)		Q18	NPN SSB meter amp	022-2876-003
J701	Antenna connector	515-3003-001	Q19	NPN 7.8025 MHz osc	022-2876-007
	RELAY		Q20	NPN 7.8025 MHz buffer	022-2876-007
K1	Relay	022-2867-001	Q21	NPN low frequency osc	022-2876-007
	SPEAKER		Q22	NPN high frequency osc	022-2876-007
LS1	Speaker	022-2889-001	Q23	FET USB mixer	022-2876-013
	INDUCTORS		Q24	NPN 35 MHz amp	022-2876-007
L101	1 mH choke	022-2842-001	Q25	FET synthesizer mixer	022-2876-005
L201	22 μ H choke	542-3002-002	Q26	NPN 19 MHz amp	022-2876-007
L401	470 μ H choke	022-2842-002	Q27	FET transmit mixer	022-2876-008
			Q28	NPN transmit amp	022-2876-007
			Q29	NPN predriver	022-2876-010
			Q30	Driver	022-2876-011
			Q31	NPN power amplifier	022-2876-012
			Q32	AGC control	022-2876-007
				RESISTORS	
			R101	56 Ω 1 W metal oxide	569-1006-560
			R102	Same as R101	
			R103	33 Ω 1 W metal oxide	569-1006-330
			R202	270K Ω 1/4 W carbon	569-1002-271
			R203	10K Ω 1/4 W carbon	569-1002-103
			R204	3.3K Ω 1/4 W carbon	569-1002-332

PARTS LIST (cont'd)

SYMBOL NO.	DESCRIPTION	PART NO.	SYMBOL NO.	DESCRIPTION	PART NO.
R205	15K Ω 1/4 W carbon	569-1002-153	R436	10K Ω 1/4 W carbon	569-1002-103
R206	470 Ω 1/4 W carbon	569-1002-471	R437	470 Ω 1/4 W carbon	569-1002-471
R207	Same as R206		R439	15K Ω 1/4 W carbon	569-1002-153
R208	2.2K Ω 1/4 W carbon	569-1002-222	R440	220 Ω 1/4 W carbon	569-1002-221
R209	10K Ω 1/4 W carbon	569-1002-103	R441	10K Ω \pm 10% 1/4 W	569-1002-103
R210	1K Ω 1/4 W carbon	569-1002-102	R442	Same as R441	
R212	22K Ω 1/4 W carbon	569-1002-223	R443	33K Ω 1/4 W carbon	569-1002-333
R213	2.2K Ω 1/4 W carbon	569-1002-222	R445	Same as R443	
R214	10K Ω 1/4 W carbon	569-1002-103	R446	Same as R443	
R215	330 Ω \pm 10% 1/4 W	569-1002-331	R447	Same as R443	
R216	1K Ω	022-2862-006	R448	10K Ω 1/4 W carbon	569-1002-103
R217	0.22 Ω 1/4 W carbon	022-2869-003	R449	Same as R448	
R301	100 Ω 1/4 W carbon	569-1002-101	R450	Same as R448	
R302	56K Ω 1/4 W carbon	569-1002-563	R451	15K Ω 1/4 W carbon	569-1002-153
R303	33K Ω 1/4 W carbon	569-1002-333	R452	3.3K Ω 1/4 W carbon	569-1002-332
R304	4.7K Ω 1/4 W carbon	569-1002-472	R453	10K Ω 1/4 W carbon	569-1002-103
R305	15K Ω 1/4 W carbon	569-1002-153	R454	Same as R453	
R306	1K Ω 1/4 W carbon	569-1002-102	R456	15K Ω 1/4 W carbon	569-1002-153
R307	3.3K Ω 1/4 W carbon	569-1002-332	R457	4.7K Ω 1/4 W carbon	569-1002-472
R308	1K Ω 1/4 W carbon	569-1002-102	R458	470 Ω 1/4 W carbon	569-1002-471
R309	10K Ω 1/4 W carbon	569-1002-103	R459	2.2K Ω 1/4 W carbon	569-1002-222
R310	Same as R309		R460	3.3K Ω 1/4 W carbon	569-1002-332
R311	1.8K Ω 1/4 W carbon	569-1002-182	R461	1K Ω 1/4 W carbon	569-1002-102
R312	4.7K Ω 1/4 W carbon	569-1002-472	R464	100 Ω 1/4 W carbon	569-1002-101
R313	Same as R312		R465	2.2K Ω 1/4 W carbon	569-1002-222
R314	Same as R312		R466	10K Ω 1/4 W carbon	569-1002-103
R315	22K 1/4 W carbon	569-1002-223	R467	5K Ω	022-2862-013
R316	330 Ω 1/4 W carbon	569-1002-331	R468	Potentiometer, RF gain	022-2862-003
R317	1K Ω 1/4 W carbon	569-1002-102	R469	20K Ω	022-2862-008
R318	10K Ω	022-2862-007	R470	100K Ω	022-2862-009
R319	Potentiometer, squelch	022-2862-002	R471	22K Ω \pm 10% 1/4 W	569-1002-223
R320	Potentiometer volume	022-2862-001	R501	4.7K Ω 1/4 W carbon	569-1002-472
R401	470K Ω 1/4 W carbon	569-1002-471	R502	Same as R501	
R402	1K Ω 1/4 W carbon	569-1002-102	R503	470 Ω 1/4 W carbon	569-1002-471
R403	100K Ω 1/4 W carbon	569-1002-104	R504	220 Ω 1/4 W carbon	569-1002-221
R404	27 Ω 1/4 W carbon	569-1002-271	R505	2.7K Ω 1/4 W carbon	569-1002-272
R405	3.3K Ω 1/4 W carbon	569-1002-332	R506	33K Ω 1/4 W carbon	569-1002-333
R406	2.7K Ω 1/4 W carbon	569-1002-272	R507	15K Ω 1/4 W carbon	569-1002-153
R407	1K Ω 1/4 W carbon	569-1002-102	R508	1K Ω 1/4 W carbon	569-1002-102
R408	1M Ω 1/4 W carbon	569-1002-105	R509	Same as R508	
R409	Same as R408		R510	47K Ω 1/4 W carbon	569-1002-473
R410	220K Ω 1/4 W carbon	569-1002-224	R511	330 Ω 1/4 W carbon	569-1002-331
R411	20K Ω 1/4 W carbon	569-1002-203	R512	100 Ω 1/4 W carbon	569-1002-102
R412	1K Ω 1/4 W carbon	569-1002-102	R513	330 Ω 1/4 W carbon	569-1002-331
R413	220 Ω 1/4 W carbon	569-1002-221	R514	500 Ω	022-2862-010
R414	15K Ω 1/4 W carbon	569-1002-153	R601	1K Ω 1/4 W carbon	569-1002-102
R415	3.3K Ω 1/4 W carbon	569-1002-332	R602	33K Ω 1/4 W carbon	569-1002-333
R416	470 Ω 1/4 W carbon	569-1002-471	R603	22K Ω 1/4 W carbon	569-1002-223
R417	1K Ω 1/4 W carbon	569-1002-102	R604	330 Ω 1/4 W carbon	569-1002-331
R418	3.3K Ω 1/4 W carbon	569-1002-332	R605	22K Ω 1/4 W carbon	569-1002-223
R419	470 Ω 1/4 W carbon	569-1002-471	R606	33K Ω 1/4 W carbon	569-1002-333
R420	1K Ω 1/4 W carbon	569-1002-102	R607	330 Ω 1/4 W carbon	569-1002-331
R421	47 Ω 1/4 W carbon	569-1002-470	R608	100 Ω 1 W	569-1006-101
R422	100 Ω 1/4 W carbon	569-1002-101	R609	470 Ω 1/4 W carbon	569-1002-471
R423	1K Ω 1/4 W carbon	569-1002-102	R610	Same as R609	
R424	200 Ω 1/4 W carbon	022-2869-004	R612	47K 1/4 W carbon	569-1002-473
R425	47K Ω 1/4 W carbon	569-1002-473	R613	47 Ω 1/4 W carbon	569-1002-470
R426	470 Ω \pm 10% 1/4 W	569-1002-471	R614	330 Ω \pm 10% 1/4 W	569-1002-331
R427	1K Ω 1/4 W carbon	569-1002-102	R615	470K 1/4 W solid	569-1002-474
R428	Same as R427		R616	1K Ω 1/4 W carbon	569-1002-102
R429	3.3K Ω 1/4 W carbon	569-1002-332	R618	220 Ω 1/4 W carbon	569-1002-221
R430	470 Ω 1/4 W carbon	569-1002-471	R619	47K Ω 1/4 W carbon	569-1002-473
R431	47 Ω 1/4 W carbon	569-1002-470	R620	47 Ω 1/4 W carbon	569-1002-470
R432	100K Ω 1/4 W carbon	569-1002-104	R621	680 Ω 1/4 W carbon	569-1002-681
R433	1M Ω 1/4 W carbon	569-1002-105	R622	1K Ω 1/4 W carbon	569-1002-102
R434	Same as R433		R623	100K Ω 1/4 W carbon	569-1002-104
R435	100K Ω 1/4 W carbon	569-1002-104	R624	3.3K Ω 1/4 W carbon	569-1002-332

PARTS LIST (cont'd)

SYMBOL NO.	DESCRIPTION	PART NO.	SYMBOL NO.	DESCRIPTION	PART NO.
R625	Potentiometer, fine tune	022-2862-004	T702	C182ZT 10MM 27 MHz	022-2892-015
R626	10K	022-2862-012	T703	C042QD 10MM 27 MHz	022-2892-016
R627	100Ω 1/4 W carbon	569-1002-101	T704	C979NT 10MM 27 MHz	022-2892-017
R701	100KΩ 1/4 W carbon	569-1002-104	T705	C996NT 10MM 27 MHz	022-2892-018
R702	1KΩ 1/4 W carbon	569-1002-102	T706	C043ND 10MM 27 MHz	022-2892-019
R703	3.3KΩ 1/4 W carbon	569-1002-332			
R704	470Ω 1/4 W carbon	569-1002-471		CRYSTALS	
R705	Same as R704				
R706	10KΩ 1/4 W carbon	569-1002-103	Y501	7.8025 MHz HC-25/U	022-2820-011
R707	2.7KΩ 1/4 W carbon	569-1002-272	Y601	11.700 MHz HC-25/U	022-2820-001
R708	470Ω 1/4 W carbon	569-1002-471	Y602	11.750 MHz HC-25/U	022-2820-002
R709	47Ω 1/4 W carbon	569-1002-470	Y603	11.800 MHz HC-25/U	022-2820-003
R710	10Ω 1/4 W carbon	569-1002-100	Y604	11.850 MHz HC-25/U	022-2820-004
R711	1KΩ 1/4 W carbon	569-1002-102	Y605	11.900 MHz HC-25/U	022-2820-005
R712	5.6Ω 1/4 W carbon	569-1002-569	Y606	11.950 MHz HC-25/U	022-2820-006
R713	2.2Ω 1/2 W solid	569-1004-222	Y607	7.4625 MHz HC-25/U	022-2820-007
R714	1KΩ 1/4 W carbon	569-1002-102	Y608	7.4725 MHz HC-25/U	022-2820-008
R715	47Ω 1/2 W solid	569-1004-470	Y609	7.4825 MHz HC-25/U	022-2820-009
R716	470Ω 1/2 W solid	569-1004-471	Y610	7.5025 MHz HC-25/U	022-2820-010
R717	22Ω 1/2 W solid	569-1004-220			
R718	100Ω 2 W metal oxide	022-2869-001		KNOBBS	
R719	10Ω 1/2 W solid	569-1004-100			
R720	150Ω 1 W metal oxide	022-2869-002		Knob, squelch	547-0014-002
R721	3.3KΩ 1/4 W carbon	569-1002-332		Knob, volume	547-0014-002
R722	1KΩ 1/4 W carbon	569-1002-102		Knob, mode switch	547-0014-002
R723	4.7MΩ 1/4 W solid	569-1004-475		Knob, RF gain	547-0014-002
R724	1KΩ 1/4 W carbon	569-1002-102		Knob, fine tune	547-0014-002
R725	15KΩ 1/4 W carbon	569-1002-153		Knob, channel selector	547-0014-001
R726	100KΩ	022-2862-009			
R727	10KΩ	022-2862-012		HARDWARE	
	SWITCHES				
S1	Channel selector switch	022-2883-001		352 panel	022-2832-001
S2	Mode switch	022-2883-002		Dial	022-2832-002
S3	CB-PA slide switch	022-2883-003		352 overlay (Viking 352)	022-2859-001
S4	Noise blanker slide switch	022-2883-004		352 overlay (Johnson)	022-2859-002
	TRANSFORMERS			Pilot lamp bracket, red	022-2817-001
T401	S190AT 10MM 7.8 MHz IF	022-2892-001		Pilot lamp bracket, amber	022-2817-002
T402	S183AT 10MM 7.8 MHz IF	022-2892-002		Pilot lamp bracket, blue	022-2817-003
T403	Same as T402			Pilot lamp bushing	022-2813-001
T404	Same as T402			Johnson plastic trade mark	559-2018-002
T405	10MM 27 MHz	022-2892-003		Front overlay	022-2859-003
T406	10MM 27MHz	022-2892-004		Rear panel	022-2817-004
T407	S183AT 10MM 7.8 MHz IF	022-2892-002		Battery cable stopper	586-1001-019
T408	Same as T407			3.5 connector mounting plate	022-2817-005
T409	S185ZT 10MM 7.8 MHz detector	022-2892-005		Main chassis	022-2817-006
T501	Z176IT 10MM 15.6 MHz multi	022-2892-006		Meter mounting panel	022-2817-007
T502	Same as T501			Heat sink for Q29,Q30,Q31	022-2814-001
T503	S111DT 10MM balance modulator	022-2892-007		Heat sink for IC301	022-2814-002
T601	Z282IT 10MM 19 MHz	022-2892-008		Feedthru capacitor mounting plate	022-2817-008
T602	Z188AT 10MM 19 MHz	022-2892-009		Cabinet	022-2817-009
T603	Z284AT 10MM 19 MHz	022-2892-010		Mounting bracket	537-9352-001
T604	Z285IT 10MM 35 MHz	022-2892-011		Crystal holder	126-0110-005
T605	Z286KT 10MM 35 MHz	022-2892-012		Insulator f/HA1339	022-2818-001
T606	Z287AT 10MM 35 MHz	022-2892-013		Insulator f/mic connector	022-2818-002
T701	C181ZT 10MM 27 MHz	022-2892-014		Rubber plate f/speaker	022-2818-003
				Mount plate f/speaker	022-2817-011
				Phone plug	515-0020-001